Microwave Information Model

Version 1.0
December 2016

TR-532

ONF Document Type: Technical Recommendation

ONF Document Name: Microwave Information Model Version 1.0

Disclaimer

Open Networking Foundation

2275 E. Bayshore Road, Suite 103, Palo Alto, CA 94303

www.opennetworking.org

Table of Contents

List of Figures

List of Tables

Document History

Version	Date	Description of Change
0.1	2016-07-08	Initial version of the Microwave Information Model as technology specific extension to the TR-512 ONF Core Information Model 1.1 [ONF CM]
0.2	2016-18-11	Consolidating review comments and findings of the 3rd MW PoC. Version for ONF-wide review.
1.0	2016-15-12	Consolidating comments of the ONF-wide review and finalizing for approval by ONF Tech Council. Version for official publishing.

1   Introduction

This ONF Technical Recommendation (TR) is a technology specific extension to the TR-512 ONF Core Information Model 1.2 [ONF CM]. In accordance with the SDN architecture for wireless transport networks [ONF SDN Arch WL], this management-control is expected to be achieved by wireless devices and SDN applications within or on top of an SDN Controller.

2   Definitions

2.1   Terms

The primary purpose of this document is to define terms and hence terms are defined throughout the document. Key terms are highlighted in section 2.2 Abbreviations and Acronyms of this document and of the TR-512 ONF Core Information Model 1.2 [ONF CM] by referring to the section in this document where the term is defined.

2.2   Abbreviations and Acronyms

Term	Explanation
ALIC	Adjacent Link Interference Cancelation
CEPT	European Conference of Postal and Telecommunications Administrations
CPRI	Common Public Radio Interface
CTP	Connection Termination Point

Term	Explanation
Cur	Current
DCN	Data Communication Network
E1	TDM frame containing 30 digital voice channels
ERC	European Research Council
FDD	Frequency Devision Duplex
Hsb	Hot stand-by
ID	Identifier
Int	Integer
LTP	Logical Termination Point
MIMO	Multiple Input Multiple Output Transmission
MW	Point-to-point microwave, including millimeter wave
MWPS	Microwave Physic Section
MWS	Microwave Section
NGFI	Next Generation Fronthaul Interface
*_Pac	Technology Specific Conditional Package
PDH	Plesiochrone Digitale Hierarchie
PmP	Point-to-multipoint
REC	Recommendation
Ref	Reference
Rx	Receive
SDH	Synchrone Digitale Hierarchie
SDN	Software Defined Network
SNCP	Sub-Network Connection Protection
TDD	Time Devision Duplex
TDM	Time-division multiplexing
TTP	Trail Termination Point
TR	ONF Technical Recommendation
tx	Transmit
UUID	Universally Unique Identifier
XPIC	Cross Polarization Interference Cancelation

3   Compliance Statement

Completeness

A device's interface must not be denoted as compliant to this Microwave Information Model, if it doesn't implement all components.

Support

The hardware does not necessarily need to make available all functionalities covered by this modeling. In case some functionality is not available at the hardware, the device's interface shall answer the default values defined in this model. All functionalities, which are available at the hardware and covered by the Microwave Information Model, must be manageable with this model (to the extent of the comprised attributes).

Options

This Microwave Information Model offers several alternative modeling of the logical structuring of the physical resource provided by the radio link. The device's interface must at least implement the alternative, which is specific to its device type (e.g. pure Ethernet, Ethernet+TDM Hybrid).

Proprietary Extensions

Interfaces implementing elements of this Microwave Information Model plus additional components must not be denoted as compliant. Such interfaces might be called "based on" or "expanding" it.

4 Overview of the Microwave Information Model

4.1 Coverage

The Microwave Information Model covers the following aspects:

- The radio link with its analogue characteristics like center frequency, channel bandwidth, modulation etc.

- Grouping of radio links into diversity or protection configurations

- Segmentation of the transport resources provided by a radio link

- Allocation of higher layer traffic flows (e.g. Ethernet, E1, CPRI) on these segments

- Bundling of several radio links' resources for Ethernet transport

- Header compression on the transmission path

It does not cover e.g. synchronization, user management, DCN, TDM multiplexing or Ethernet.

The Microwave Information Model provides the necessary attributes for

- the device informing the SDN Controller about its capabilities

- the Controller configuring the device

- the device providing status, problem and performance information

4.2 Overview

The Microwave Information Model comprises the following three most important elements:

- AirInterface_Pac – Contains the analogue characteristics of the physical layer of a single radio link; represents the combination of modem and radio

- Structure_Pac – Segments the physical resource provided by the AirInterface into logical pieces that can be booked by Containers

- Container_Pac – Offers transport services to higher protocol layers, e.g. fixed size containers for TDM or containers of dynamic size for Ethernet

The following three additional elements are required for modeling microwave features based on bundling of radio links into specific types of groups:

- AirInterfaceHsb – Provides hot-stand-by protection

- AirInterfaceDiversity_Pac – Required for space and frequency diversity

- CoChannelGroup – Groups AirInterface_Pacs for modeling XPIC, MIMO and ALIC

The following picture shall help understanding the logical concept, but it has to be noted that the associations between the *_Pacs are implemented in a more complex way, which is described in chapter 7.1 Attachment of *_Pacs.
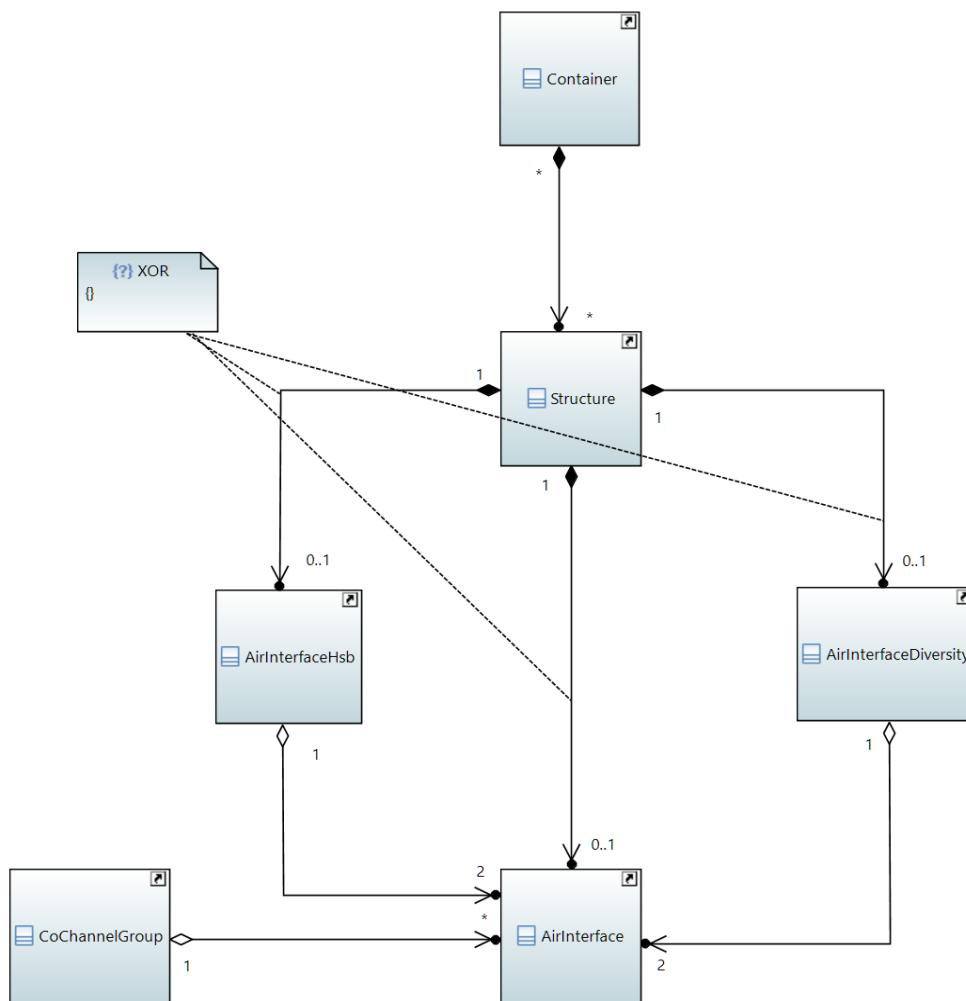
Figure 1: Model Overview

All *_Pacs are sub-structured into the following classes:

- Capabilities – The device informs about its features, characteristics and parameter value ranges

- Configuration – The Controller configures the device and the device informs about its current configuration

- Status – The device informs about measurement values and its current operational status

- Problems – The device proactively informs about events

- Current Performance – The device informs about the current status of its performance counters

- Historical Performance – The device informs about the status of its performance counters at the end of a well-defined time period
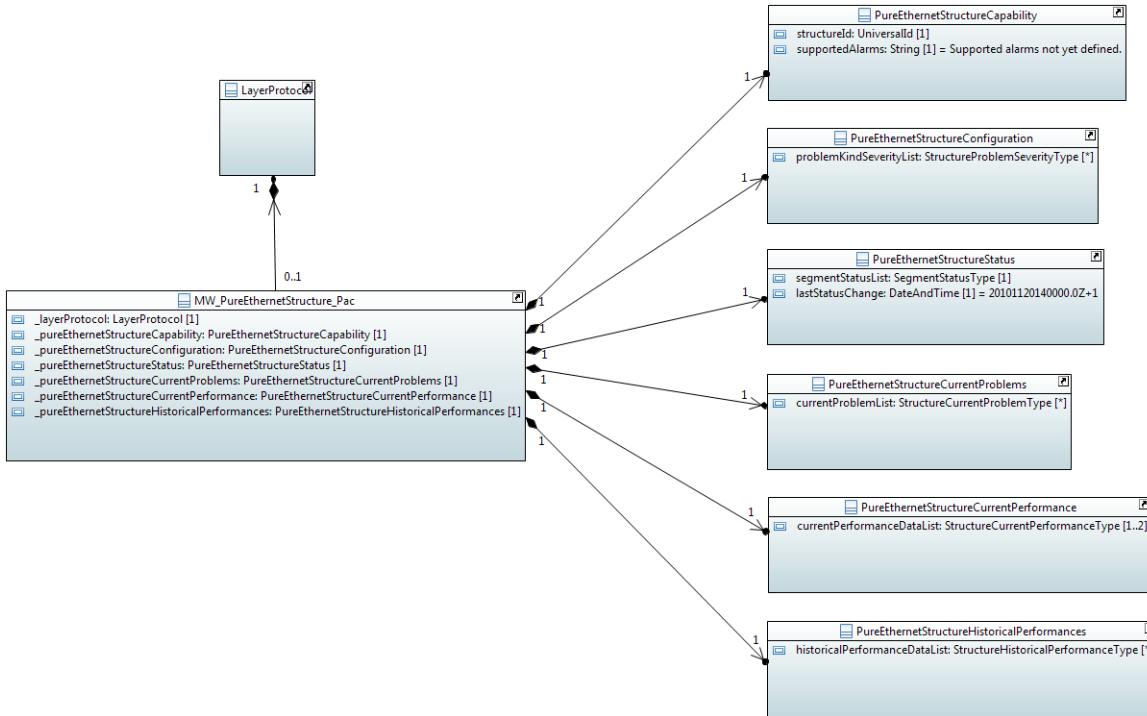
Figure 2: Structure of *_Pacs

Each *_Pac is sufficiently described by one set of capability, configuration, status and current performance attributes, but several current problem and historical performance value sets might be required. Nevertheless, *CurrentProblems and *HistoricalPerformances classes are in a one to one association to the *_Pac. The necessary multiplicity is generated by lists inside these classes. This additional hierarchy is required by the mediator implementation after conversion to YANG.

5   Conventions

5.1   UML Modeling Conventions

This TR follows the conventions as described in the TR-512 ONF Core Information Model 1.2 [ONF CM] and the TR-514 ONF UML Modeling Guidelines [ONF UMLG].

5.2   Default Values

The default values in the Microwave Information Model have been defined in accordance to the following basic principles:

- Every attribute (except keys, which have to be unique) shall have a default value.

- The default value shall be inside the value range of the data type of the attribute.

- Capability attributes:
    - The default value shall either indicate unavailability of the functionality (if applicable)
    - or be outside the range of reasonable values of the attribute.

- Configuration, status and performance attributes:
    - The default value shall either represent the configuration, status or performance measurement value right after starting the device (in case such a "neutral" value is applicable to the attribute)
    - or be outside the range of reasonable values of the attribute.

Lists of data types shall contain the minimum multiplicity number of elements. This also means that lists of data types with a minimum multiplicity of zero shall have "null" as default value.

5.3   General Stereotypes

5.3.1 Is read only

The "Is read only" stereotype has been set on "true" for all attributes that can only be read, but not modified by the SDN Controller. This applies to all attributes, which are comprised in Capability, Status, CurrentProblem, CurrentPerformance and HistoricalPerformance classes or in data types used by attributes of these classes.

The "Is read only" stereotype has been set on "false" for all attributes that need to be configurable. This applies to all attributes, which are comprised in Configuration classes or data types that are used by attributes of these classes.

Moreover, the attributes within the CoChannelGroup class need to be configurable, so their "Is read only" stereotype has also been set on "false".

5.3.2 Is unique

The "Is unique" stereotype has been set on "true" for all *Id attributes, which are of data type UniversalId.

This does not apply on *IdRef attributes, which are referring on values of the *Id attributes.

It does also not apply on containerID attributes that represent a configurable string and are required for associating traffic flows to the transport resources (Container) provided by the Microwave Information Model.

5.3.3 Multiplicity

The "Multiplicity" stereotype has been set in accordance with technology specific requirements.

5.3.4 Further General Stereotypes

The remaining stereotypes were left on their individual default values.

Stereotypes	Value
Visibility	public
Is derived	false
Is leaf	false

Stereotypes	Value
Is derived union	false
Is ordered	false
Is static	false
Aggregation	none

5.4 Comments

The comprised comments are meant to explain the attributes in such a way that further documentation is not required for understanding the attributes' meaning.

In rare cases (e.g. Problems) the modeling is open for amending device specific elements. This is done by Capability attributes of data type String, which are foreseen to contain an unspecified number of elements separated by comma. In such cases, the comment field is also used for defining a minimum set of elements, which must be supported. Of course, adding additional elements to these lists is not seen as a Proprietary Extensions according to chapter 3.

Double quotes have been avoided within the comments for supporting the conversion to YANG.

5.5 ONF Stereotypes

5.5.1 attributeValueChangeNotification

This stereotype defines whether a notification has to be raised, when the attribute changes its value.

It has been set on "true" for all attributes, which are comprised in Configuration classes or in data types used by attributes of the Configuration classes.

It has also been set on "true" for status attributes, which might be subject to automated changes but do not represent gradually changing measurement value.

The attributeValueChangeNotification stereotype has been set on "false" for status attributes, which are exclusively following configuration activities. This is for avoiding double messaging.

5.5.2 objectCreationNotification and objectDeletionNotification

These stereotypes define whether a notification has to be raised when an instance of a class has been created, respectively deleted.

It has been set on "true" for all *_Pac classes, which are potentially attached to the LayerProtocol class of the Core Information Model (see chapter 7.1 Attachment of *_Pacs for details).

5.5.3 isInvariant

This stereotype defines whether the value of the attribute can be changed, or not, after it has been created.

It has been set on "true" (means: cannot be changed) for the following attributes:

- *Ids, which are representing target addressed for referencing data types or classes, (except ContainerIDs, which are required for connecting logical traffic from outside the reach of the modeling with a Container)

- All attributes, which are comprised in Capability classes or in data types used by attributes of the Capability classes

- All attributes, which are comprised in data types that are attached to the CurrentProblems classes.

- All attributes, which are comprised in data types that are attached to the *Performance classes.

- All attributes, which are comprised in Notifications

It has been set on "false" (means: can be changed) for the following attributes:

- All attributes, which are comprised in Configuration classes

- All attributes, which are comprised in Status classes or in data types used by attributes of the Status classes

5.5.4 valueRange

This stereotype identifies the allowed values for the attribute.

It has not been used within the Microwave Information Model, because of a conflict with the policy defined for default values in chapter 5.2

5.5.5 partOfObjectKey

This stereotype indicates whether the attribute is part of the object key or not. Value "0" (default) means the attribute is not part of the object key. Values > "0" indicate that the attribute is part of the object key and the value defines the order of the attribute in case the key is composed of more than one attribute.

The partOfObjectKey stereotype has been set on "1" for all *Id attributes, which are of data type UniversalId, but not the *IdRef attributes, which are referring on them.

It does also not apply on containerID attributes that represent a configurable string and are required for associating traffic flows to the transport resources (Container) provided by the Microwave Information Model.

5.5.6 unit

This optional stereotype contains a textual definition of the unit associated with the attribute's value.

The following units have been used in the Microwave Information Model

Unit	Meaning
%	Percentage
Bytes	Total number of Bytes
Bytes/min	Bytes per minute
Bytes/s	Bytes per second
Celsius	Degree Celsius
dB	Decibel
dBm	Decibel milliwatt
kbit/s	1000 bit per second
kHz	1000 Hertz
s	Second
symbols	Number of symbols

5.5.7 Support Qualifier

This stereotype qualifies the support of the object class at the management interface.

Aside the following exceptions, the SupportQualifier has always been left on its default value "mandatory":

- The MW_PureEthernetStructure_Pac class is "conditional_mandatory" for device types transporting pure Ethernet.

- The MW_HybridMwStructure_Pac class is "conditional_mandatory" for device types transporting Ethernet + TDM.

5.5.8 bitLength

The bitLength stereotype has been used to define Integer primitives smaller than 64bit.

5.5.9 Unsigned, Encoding and Counter

The unsigned, encoding and counter stereotypes have not been applied.

5.6 Future Versions and Release Management

In future, it may become desirable to revise the Microwave Information Model. However, changes are not allowed if they have any potential to cause interoperability problems between a client using an original version and a server using an updated version.

For any published update, a new revision statement [section 7.1.9 of RFC 7950] must be included in the YANG Microwave Data Model in front of the existing revision statements and modifications must comply with the constraints for updating YANG modules [section 11 of RFC 7950].

The SupportQualifier [section 5.9 of ONF UMLG], which results in feature [section 7.20.1 of RFC 7950] and if-feature [section 7.20.2 of RFC 7950] statements in YANG, might be used to add further device type specific portions to the Microwave Information Model.

The lifecycle state properties [section 6.2.1 of ONF UMLG], which are translated into status statements [section 7.21.2 of RFC 7950] in YANG, might be used to mark outdated portions for not being used in new implementations.

6 Special elements

6.1 Capabilities of the Radio Interface

The value ranges of the devices' parameters, which are for configuring the analogue characteristics of the physical layer, are depending from each other.

Example 1: The availability of XPIC depends (in some cases) on the channel bandwidth, which depends on the center frequency.

Example 2: The maximum and minimum configurable transmit power are depending on the adjusted modulation scheme.

The number of permutations of value ranges can reach the area of several thousand depending on the number of center frequencies, channel bandwidths and modulation schemes adjustable at the device.

To limit the volume of capability information, it has been decided not to describe the radio characteristics for each and every explicit center frequency, but to reference on an external description of the allowed center frequencies and to describe the transmission modes, which are adjustable based on this channel plan.

Example: ECC/REC/(01) 04 Annex 5 is describing 7MHz, 14MHz, 28MHz, 56MHz, 112MHz and 224MHz channels. In case a device would not support 224MHz channels, the list of supported transmission modes shall just not contain any element with a channel bandwidth of 224MHz.

The supportedChannelPlan attribute is used for unambiguously referencing a single channel plan description. The following list shows a couple of non-binding examples for official documents, which are relevant for Europe.

Table 1: Examples for supportedChannelPlan values

supportedChannelPlan	Frequency Band	Comment
ECC/REC/(04)05	3.4-3.6GHz	
ECC/REC/(04)05	3.6-3.8GHz	
ERC/REC14-01	5.925-6.425GHz	
CEPT/ERC/REC 12-05E_Annex_A	10.0-10.68GHz	1,75-28MHz
CEPT/ERC/REC 12-05E_Annex_B	10.0-10.68GHz	56MHz
CEPT/ERC/REC12-02E_Annex_A	12.75-13.25GHz	1,75-28MHz
CEPT/ERC/REC12-02E_Annex_B	12.75-13.25GHz	56MHz
CEPT/ERC/REC12-07E_Annex_A	14.5-15.35GHz	
CEPT/ERC/REC12-03E	17.7-19.7GHz	
T/R13-02	22.0-29.5GHz	
T/R13-02_Annex_A1	22.0-22.6GHz	
T/R13-02_Annex_A1	23.0-23.6GHz	
T/R13-02_Annex_A2	22.59075-22.75875GHz	
T/R13-02_Annex_A2	22.84275-23.01075GHz	
T/R13-02_Annex_A3	22.75875-22.84275GHz	
T/R13-02_Annex_B	24.5-26.5GHz	
T/R13-02_Annex_C	27.5-29.5GHz	
ECC/REC/(02)02	31.0-31.3GHz	
ERC/REC/(01)02_Annex_B	31.8-33.4GHz	FDD
T/R12-01E	37.0-39.5GHz	
ECC/REC/(01)04_Annex_2	40.5-43.5GHz	Block
ECC/REC/(01)04_Annex_5	40.5-43.5GHz	Channels
ERC/REC12-11_Annex_2	48.5-50.2GHz	
ERC/REC12-11_Annex_1	51.4-52.6GHz	
ERC/REC12-12_Annex_2	55.78-57.0GHz	FDD
ECC/REC/(09)01	57-64GHz	
ECC/REC/(05)02	64-66GHz	
ECC/REC/(05)07_Annex_1	71-76GHz	
ECC/REC/(05)07_Annex_2	81-86GHz	
ECC/REC/(14)01_Annex_2	92-95GHz	FDD

For handling the dependencies, the description of the capabilities of the radio interface has been organized in three layers:

- The Capability class, which is common to all *_Pacs, contains several characteristics that are specific to the combination of modem and radio, but applicable to all modes the radio link could operate. Further on, it contains a list of supported channel plans.

- The ChannelPlanType data type mainly contains the supportedChannelPlan attribute, which is a String containing the name of a channel plan description, and a list of transmission modes, which can be operated on the referenced channel plan.

- The TransmissionModeType data type contains the attributes required to describe the analogue characteristics of the radio link.
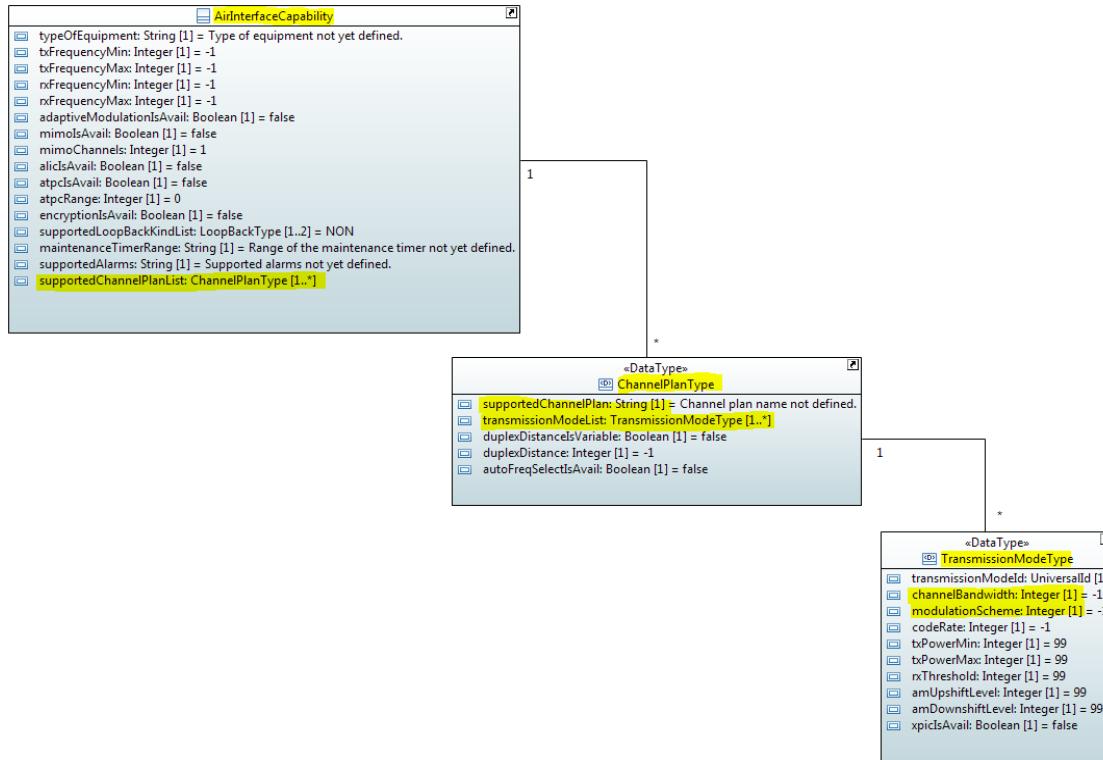
Figure 3: Tree Structure of AirInterface Capabilities

The attributes of the Capability class and its associated data types are expressing the capabilities of the hardware type. This applies also to the xpicIsAvail attribute, which is contained in the TransmissionModeType data type and does not give any information about the operational capability of the individual installation on site.

6.2   Multiple Structure Classes

The Microwave Information Model supports allocating traffic flows on the physical resources of the radio interface. The allocation is modeled by associating *Container classes with sub-segments provided by the *Structure classes.

The methods of sub-segmenting and allocating depend on the implementation of the wireless transport device (e.g. time division duplex vs. frequency division duplex, point-to-point vs. shared medium).

Due to the very basic differences of these methods and the ways of modeling them, the Microwave Information Model offers several Structure_Pacs that must be alternatively applied depending on the devices type (see also chapter 3).

The current version of the modeling offers Structure_Pacs for point-to-point links, which are implementing frequency division duplex and are distinguishing Pure Ethernet and Hybrid microwave links.

- The PureEthernetStructure_Pac offers a single segment, which might vary in size, if adaptive modulation is activated. One or several (only in case the value of the EthernetContainerCapability: bundlingIsAvail attribute is set on "1") of those segments can be linked to an EthernetContainer_Pac.

- The HybridMwStructure_Pac provides multiple TDM segments, which are of fixed size, and an additional segment for Ethernet that is of variable size. There is a one to one relation between TdmContainer_Pac and TDM segment. The Ethernet segment behaves equally to the one provided by the PureEthernetStructure_Pac.

Besides allowing definition of much simpler *Structure classes, this way of modeling is also seen to be more flexible in regards to future expansions.

6.3   Problem Definitions, Associations and Inheritances

As already stated in chapter 4.2, the multiplicity of the associations between *_Pac and *CurrentProblems classes are always one and *CurrentProblems classes contain a list of *CurrentProblemType data type.

Problem statements, respectively alarms contain generic attributes. Usually, generic attributes are consolidated in classes belonging to the Core Information Model and are inherited from these classes.

Since no such super class is available in the currently valid version of the Core Information Model, an individual super class has been defined as a preliminary substitute.

So the *CurrentProblemType data types contain a problemName attribute. problemSeverity, sequenceNumber and timestamp attributes are inherited from the generic MwCurrentProblem super class.
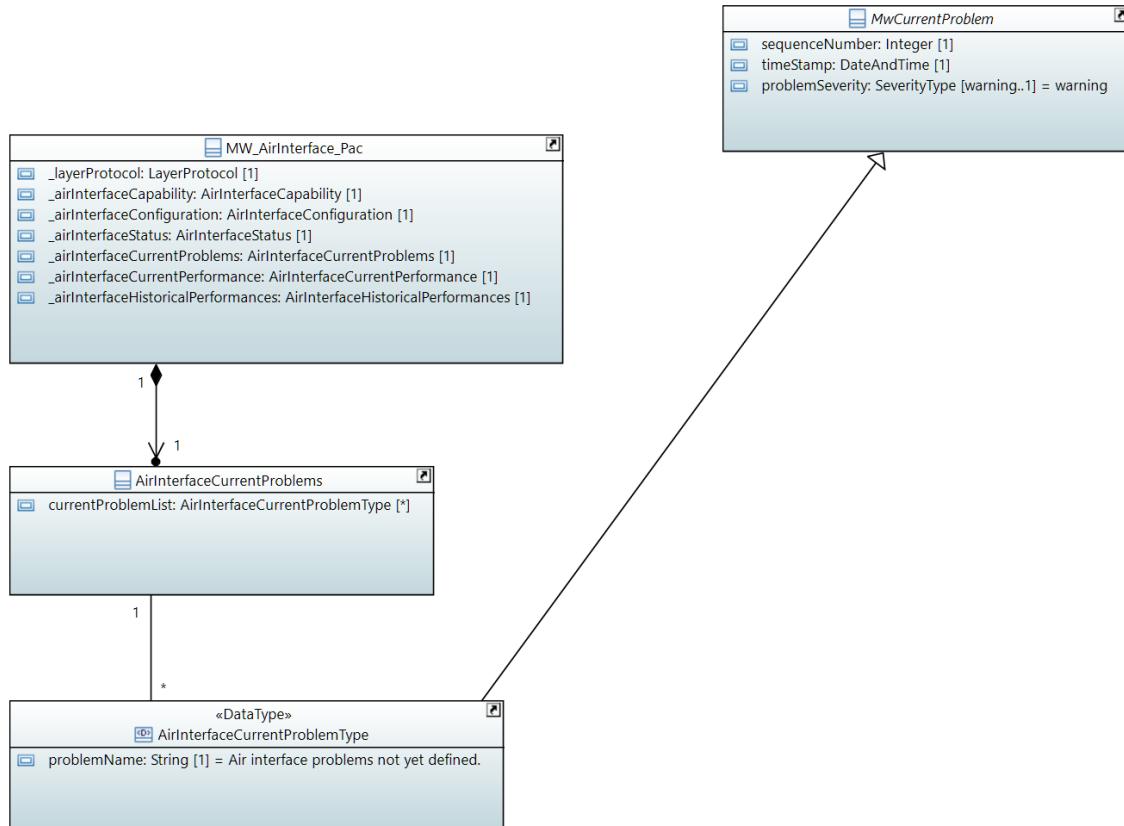
Figure 4: Example for Current Problems Associations and Inheritances

The problemName attributes are just seemingly identical in all *CurrentProblemType data types. The problemName attributes cannot be inherited from the MwCurrentProblem super class, because corresponding supportedAlarms attributes in *Capability classes are referenced in their respective comment fields.

The severity of a kind of problem shall be configurable. A problemKindSeverityList attribute is added to each of the *Configuration classes for that purpose. The severity defined in *ProblemSeverityType data

types shall then be applied to all instances of the *CurrentProblemType data type comprising the same problem name.
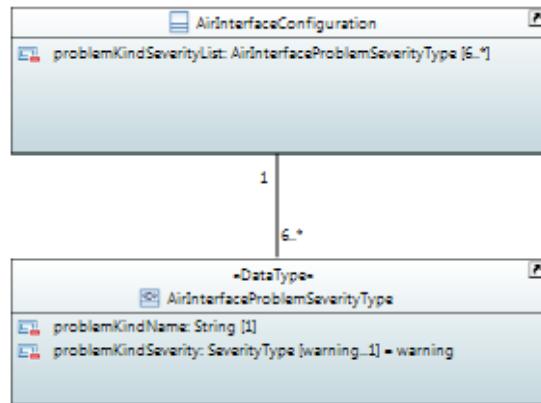
Figure 5: Example for Current Problems Definition

The multiplicity of the association towards the *ProblemSeverityType data type is determined by the number of problem types specified in the corresponding supportedAlarms attribute in the *Capability class. The number of problem types, which are prescribed in the comment field of the corresponding supportedAlarms attribute is always given as the minimum multiplicity.

6.4 Performance Values

As already stated in chapter 4.2, the multiplicities of the associations between *_Pac and *CurrentPerformance respectively *HistoricalPerformances classes are always one and *CurrentPerformance respectively *HistoricalPerformances classes contain a *CurrentPerformanceType respectively *HistoricalPerformanceType data type list.

Technology specific performance value attributes have been put into *PerformanceType data types for being able of referencing them as current performance values as well as historical performance values. Generic performance value attributes are inherited from super classes provided by the Core Information Model.
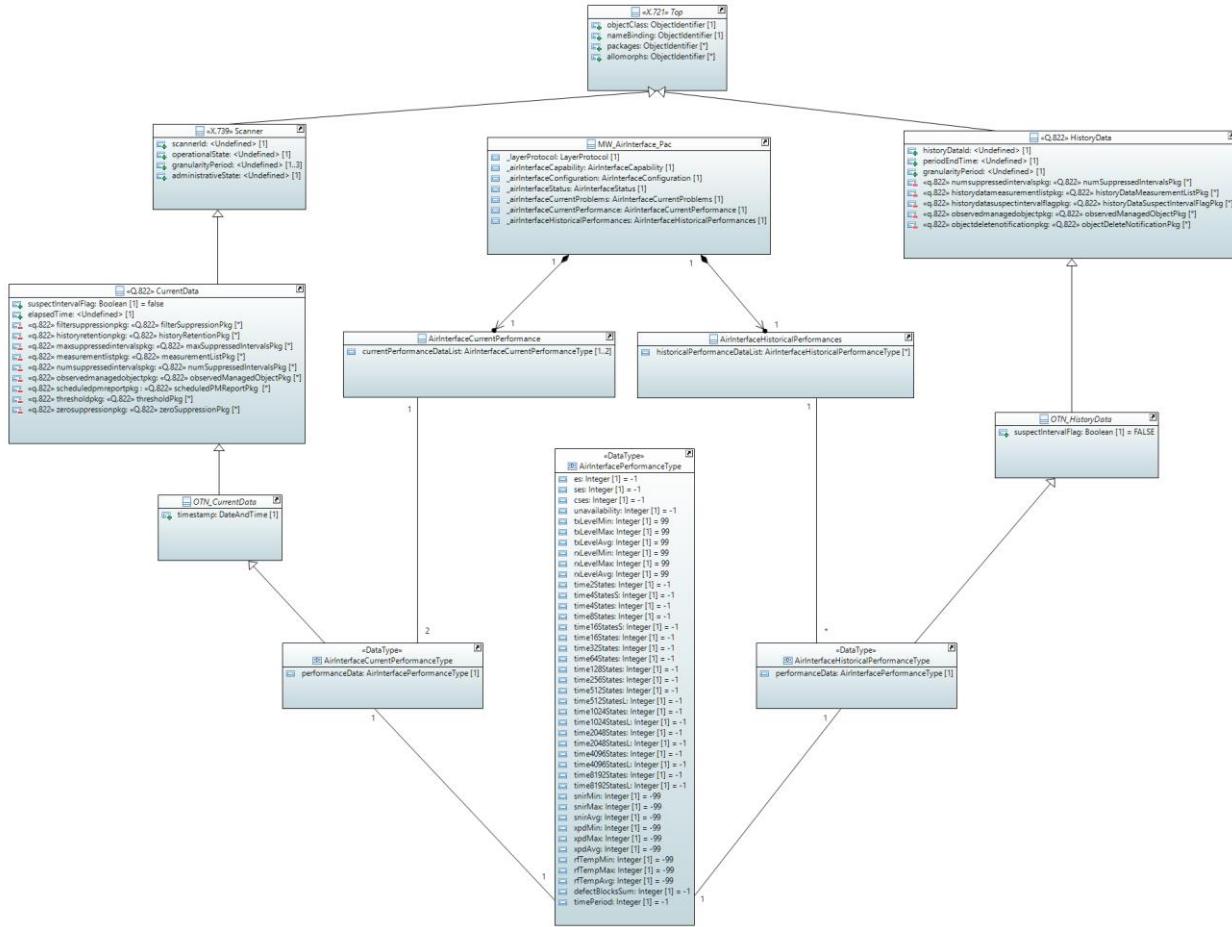
Figure 6: Example for Performance Associations and Inheritances

The isInvariant stereotype of the attributes, which are contained in the *PerformanceType data types, are set on 'true'. This applies also on the current performance values. As a consequence, current performance values have to be readout as a complete, new instance of the *PerformanceType data type. This matches also with the inherited timestamp attribute.

The *PerformanceType data types also inherit a granularityPeriod attribute. Since there is no filtering of 15min or 24h performance values at the device or mediator, data for both granularity periods is uploaded and has to be sorted based on this attribute on application level.

6.5   TDM Containers

The Microwave Information Model basically allows transporting any kinds of TDM signals. This is possible, because neither TDM containers nor TDM segments are fixedly predefined in the modeling.

Instead the Capability class of the TdmContainer_Pac is associated with a list of TdmContainerType data types. Name and bandwidth consumption of container types can be defined within the TdmContainerType data type. Prescriptions for names and sizes are made within the comments at the corresponding attributes.
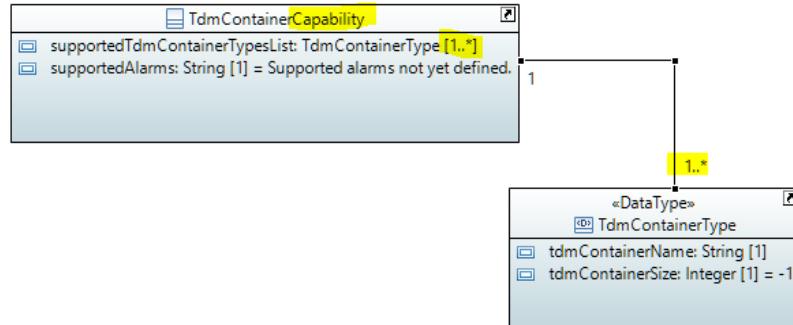
Figure 7: TDM Container Capabilities

The actual type of an instance of a TDM container can then be chosen from the defined types.
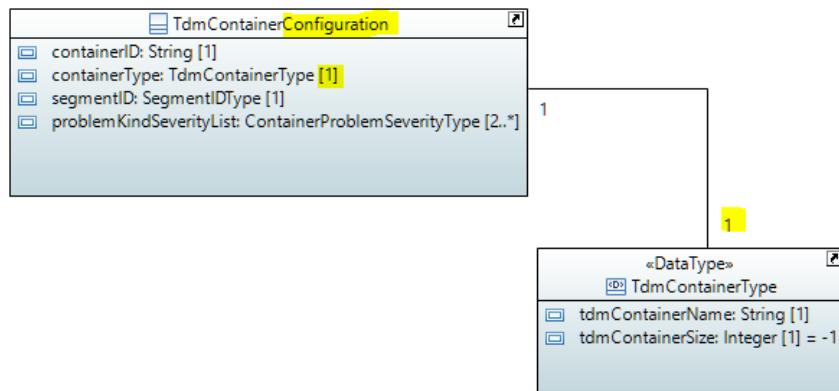
Figure 8: TDM Container Configuration

The modeling of the HybridMwStructure class is very similar. Obviously, bandwidth consumption of the container (tdmContainerSize attribute in TdmContainerType data type) and size of the transport resource (tdmSegmentSize attribute in TdmStructureType data type) have to have the same value for successful allocation.

7 Attachment to the Core Information Model

The Core Information Model is the basis of the Microwave Information Model. However not all object classes of the Core Information Model are necessary for a control interface between microwave devices and SDN Controller. For example the root element of the Microwave Information Model is the NetworkElement object class. The SdnController object class must not be implemented in network elements, because a network element cannot offer any control for SDN Controllers.

The following classes of the Core Information Model are not used by the Microwave Information Model:

- SdnController

- NetworkControlDomain

- Link

- LinkPort

- FcRoute

Figure 9 highlights the classes of the Core Information Model, which are part of the Microwave Information Model.
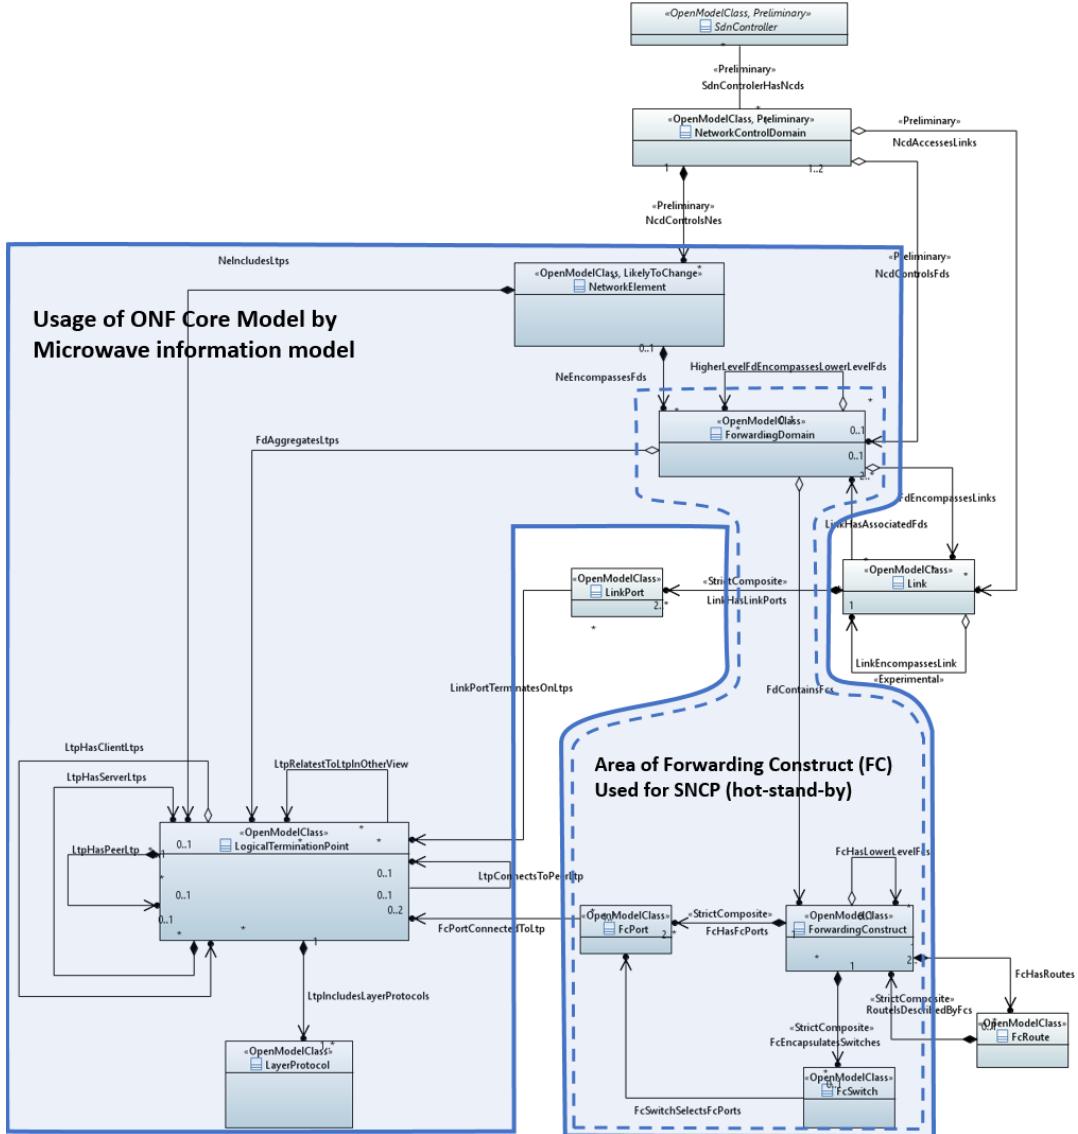
Figure 9: Usage of ONF Core Information Model 1.2

The LogicalTerminationPoints (LTP) is the most important class. Its associations allow complex hierarchies of LTPs. A LayerProtocol class provides content to the generic LTP class and describes its function.

7.1   Attachment of *_Pacs

Technology specific extensions of the Core Information Model are implemented by extending the LayerProtocol class with conditional packages. These conditional packages are called *_Pacs.

The Microwave Information Model defines six technology specific conditional packages, pointing to the LayerProtocol:

- The MW_AirInterface_Pac defines an LTP as microwave physical section trail termination point (MWPS-TTP).

- The MW_AirInterfaceDiversity_Pac defines an LTP as microwave section connection termination point (MWS-CTP). This conditional package is only required, while SpaceDiversity or FrequencyDiversity is used.

- The MW_PureEthernetStructure_Pac defines an LTP as microwave section trail termination point (MWS-TTP) for pure Ethernet microwave systems.

- The MW_HybridMWStructure_Pac defines an LTP as microwave section trail termination point (MWS-TTP) for microwave systems transporting Ethernet and TDM containers.

- The MW_EthernetContainter_Pac defines an LTP as a microwave client connection termination point (MW-Client-CTP) for an Ethernet client signal.

- The MW_TdmContainter_Pac defines an LTP as a microwave client connection termination point (MW-Client-CTP) for any type of TDM client signal.

Figure 10 shows the associations between the LayerProtocol class of the Core Information Model and the six microwave specific conditional packages. Please note that for simplicity reasons the ForwardingConstruct class is not displayed.
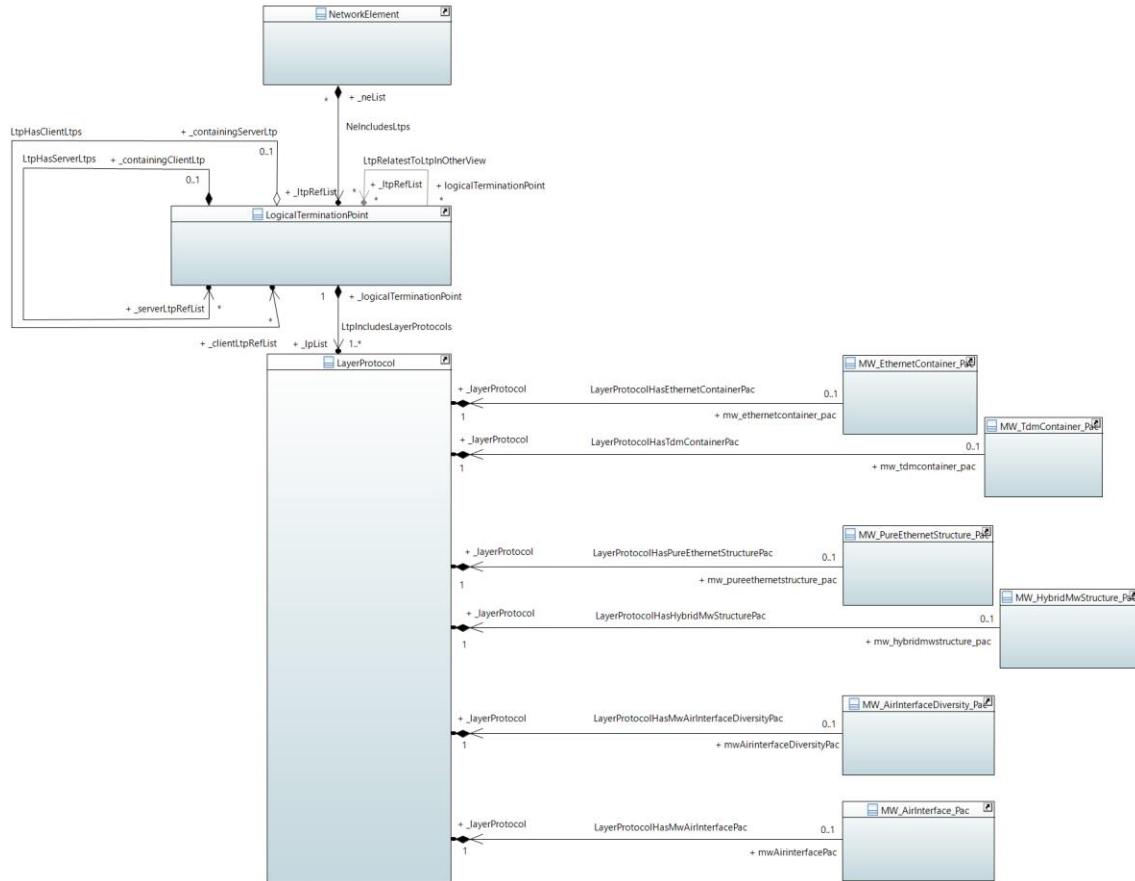
Figure 10: Associations between LayerProtocol and *_Pac

7.2   Attachment of the Co-Channel Group Class

The CoChannelGroup class is for modeling XPIC, MIMO and ALIC, which are required for operating groups of air interfaces that are sharing the same frequency channel. The grouping is done by a list of LogicalTerminationPoint (LTPs) with associated AirInterface_Pacs.
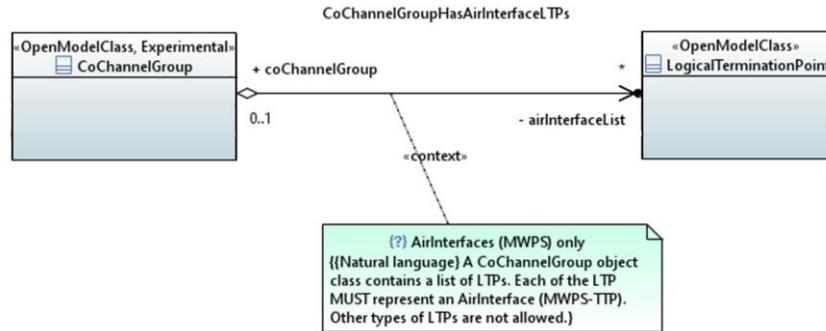
Figure 11: Associations between CoChannelGroup and LTP

7.3   Attachment of the HSB Pac

The hot-stand-by (HSB) functionality of microwave devices is a 1+1 SNCP of the microwave section (MWS). The Core Information Model covers such protection function by the ForwardingConstruct class. Therefore the Microwave Information Model has no technology specific conditional package for that purpose.

It needs to be mentioned that not all required protection control functions are yet defined. Future versions of the Core Information Model or the Microwave Information Model will define those functions. Please see also a corresponding entry in chapter 8 Future Work.
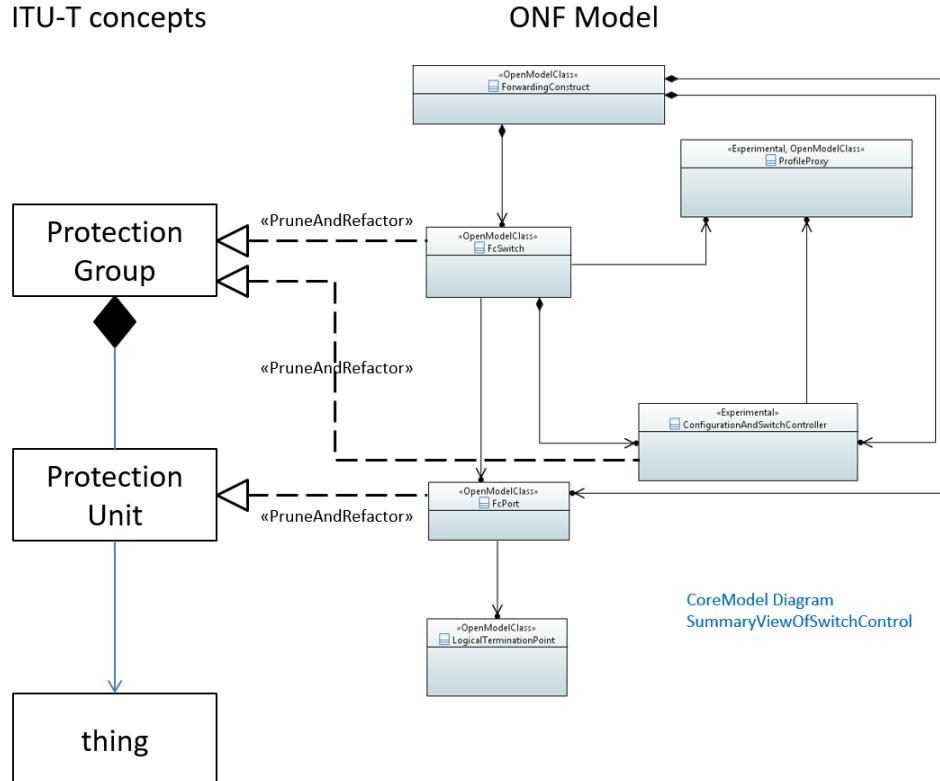
Figure 12: HSB is covered by the ForwardingConstruct of the Core Information Model

8   Future Work

Additional aspects and functionality will incrementally be added to the Microwave Information Model in future versions. The following areas for potential amendments have been identified:

- Aligning the modeling of *CurrentProblemType data types to the Core Information Model after provisioning of corresponding super classes

- Aligning the modeling of protection after planed changes at the Core Information Model.

- Adding additional attributes (e.g. "coChannelConfigurationIsComplete") for expressing the operational readiness for operating e.g. XPIC.

- Optimization of Loopback configuration

- Enriching modeling of MIMO according to hardware implementations

- Adding Structure classes for covering point-to-multipoint (PmP) systems

- Adding references to models of Ethernet switches

- Adding automatic neighbor discovery and its relation to trail trace identifier according to ITU-T REG 7714.1

- Adding relations to the Equipment Model

- Adding references or models of TDM (e.g. PDH, SDH, CPRI) matrixes

- Adding Structure classes for covering Time Devision Duplex (TDD) systems

- Adding Structure classes for covering Next Generation Fronthaul Interface (NGFI)

9   UML Model Files

The UML model files can be found here

161215_ONF_MW_I
M_TR-532_v1_0.zip

or here

https://login.opennetworking.org/bin/c5i?mid=4&rid=7&gid=0&s3=6&k1=1790&k2=5&k3=3&tid=1481830096

10 Data Dictionary

Please be aware that the following lists are showing not all the attribute's characteristics and stereotypes, e.g. default value and unit are missing. In case of any doubt or ambiguity the attached UML (Papyrus export) is the relevant description of the Microwave Information Model.

10.1 AirInterface_Pac and CoChannelGroup

AirInterfaceCapability
- typeOfEquipment: String [1] = Type of equipment not yet defined.
- txFrequencyMin: Integer [1] = -1
- txFrequencyMax: Integer [1] = -1
- rxFrequencyMin: Integer [1] = -1
- rxFrequencyMax: Integer [1] = -1
- adaptiveModulationIsAvail: Boolean [1] = false
- mimoIsAvail: Boolean [1] = false
- mimoChannels: Integer [1] = 1
- alicIsAvail: Boolean [1] = false
- atpcIsAvail: Boolean [1] = false
- atpcRange: Integer [1] = 0
- encryptionIsAvail: Boolean [1] = false
- supportedLoopBackKindList: LoopBackType [1..2] = NON
- maintenanceTimerRange: String [1] = Range of the maintenance timer not yet defined.
- supportedAlarms: String [1] = Supported alarms not yet defined.
- supportedChannelPlanList: ChannelPlanType [1..*]

AirInterfaceConfiguration
- airInterfaceName: String [1] = Air interface ID not yet defined.
- radioSignalID: String [1] = Radio signal ID not yet defined.
- txFrequency: Integer [1] = -1
- rxFrequency: Integer [1] = -1
- txChannelBandwidth: Integer [1] = -1
- rxChannelBandwidth: Integer [1] = -1
- polarization: PolarizationType [1] = not-specified
- powerIsOn: Boolean [1] = true
- transmitterIsOn: Boolean [1] = false
- receiverIsOn: Boolean [1] = true
- txPower: Integer [1] = 99
- adaptiveModulationIsOn: Boolean [1] = false
- modulationMin: Integer [1] = -1
- modulationMax: Integer [1] = -1
- xpicIsOn: Boolean [1] = false
- mimoIsOn: Boolean [1] = false
- alicIsOn: Boolean [1] = false
- atpcIsOn: Boolean [1] = false
- atpcThreshUpper: Integer [1] = 99
- atpcThreshLower: Integer [1] = 99
- autoFreqSelectIsOn: Boolean [1] = false
- autoFreqSelectRange: Integer [1] = -1
- modulationIsOn: Boolean [1] = true
- encryptionIsOn: Boolean [1] = false
- cryptographicKey: String [1] = Cryptographic key not yet defined.
- loopBackKindOn: LoopBackType [1] = NON
- maintenanceTimer: Integer [1] = -1
- problemKindSeverityList: AirInterfaceProblemSeverityType [6..*]

AirInterfaceStatus
- txFrequencyCur: Integer [1] = -1
- rxFrequencyCur: Integer [1] = -1
- txLevelCur: Integer [1] = 99
- rxLevelCur: Integer [1] = 99
- modulationCur: Integer [1] = -1
- codeRateCur: Integer [1] = -1
- snirCur: Integer [1] = -99
- xpdCur: Integer [1] = -99
- rfTempCur: Integer [1] = -99
- lastStatusChange: DateAndTime [1] = 20101120140000.0Z+1
- radioPowerIsUp: Boolean [1] = false
- linkIsUp: Boolean [1] = false
- xpicIsUp: Boolean [1] = false
- mimoIsUp: Boolean [1] = false
- alicIsUp: Boolean [1] = false
- atpcIsUp: Boolean [1] = false
- autoFreqSelectIsUp: Boolean [1] = false
- loopBackKindUp: LoopBackType [1] = NON
- localEndPointId: String [1] = not-supported
- remoteEndPointId: String [1] = not-supported

AirInterfaceCurrentProblems
- currentProblemList: AirInterfaceCurrentProblemType [*]

AirInterfaceCurrentPerformance
- currentPerformanceDataList: AirInterfaceCurrentPerformanceType [1..2]

AirInterfaceHistoricalPerformances
- historicalPerformanceDataList: AirInterfaceHistoricalPerformanceType [*]

LogicalTerminationPoint

LayerProtocol

CoChannelGroup
- coChannelGroupId: UniversalId [1]
- _airInterfaceList: LogicalTerminationPoint [*]
- sortOfCoChannelGroup: String [1]

MW_AirInterface_Pac
- _layerProtocol: LayerProtocol [1]
- _airInterfaceCapability: AirInterfaceCapability [1]
- _airInterfaceConfiguration: AirInterfaceConfiguration [1]
- _airInterfaceStatus: AirInterfaceStatus [1]
- _airInterfaceCurrentProblems: AirInterfaceCurrentProblems [1]
- _airInterfaceCurrentPerformance: AirInterfaceCurrentPerformance [1]
- _airInterfaceHistoricalPerformances: AirInterfaceHistoricalPerformances [1]

10.1.1 MW_AirInterface_Pac

Qualified Name: MicrowaveModel::ObjectClasses::AirInterface::MW_AirInterface_Pac

Applied stereotypes:

- OpenModelClass
    - objectCreationNotification: YES
    - objectDeletionNotification: YES
    - support: MANDATORY

Table 2: Attributes for MW_AirInterface_Pac

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
_layerProtocol	LayerProtocol ./.	1	RW	OpenModelAttribute • partOfObjectKey: 1 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	CoreModel-CoreNetworkModule-ObjectClasses:NetworkElement/_ltpRefList/_lpList/uuid
_airInterfaceCapability	AirInterfaceCapability ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class
_airInterfaceConfiguration	AirInterfaceConfiguration ./.	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
_airInterfaceStatus	AirInterfaceStatus ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class
_airInterfaceCurrentProblems	AirInterfaceCurrentProblems ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class
_airInterfaceCurrentPerformance	AirInterfaceCurrentPerformance ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class
_airInterfaceHistoricalPerformances	AirInterfaceHistoricalPerformances ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class

10.1.2 AirInterfaceCapability

Qualified Name: MicrowaveModel::ObjectClasses::AirInterface::AirInterfaceCapability

Describes the 'analog' capabilities of modem and transmitter of the microwave device. Value ranges of attributes are not independently (e.g. min. and max. transmit power depends on modulation). Legal combinations of values are expressed in transmissionModeTypes.

Applied stereotypes:
- OpenModelClass
  - objectCreationNotification: NO

- objectDeletionNotification: NO
- support: MANDATORY

Table 3: Attributes for AirInterfaceCapability

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
typeOfEquipment	String Type of equipment not yet defined.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	This parameter indicates the equipment type. Instead of uploading the complete set of capabilities, capabilities of the same equipment type could be reused. Should be unique for a combination of modem, radio and their respective firmware.
txFrequencyMin	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: kHz • support: MANDATORY	Value of the minimum transmit frequency tunable at the air interface.
txFrequencyMax	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: kHz • support: MANDATORY	Value of the maximum transmit frequency tunable at the air interface.
rxFrequencyMin	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: kHz • support: MANDATORY	Value of the minimum receive frequency tunable at the air interface.
rxFrequencyMax	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: kHz • support: MANDATORY	Value of the maximum receive frequency tunable at the air interface.

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
adaptiveModulationIsAvail	Boolean false	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	In case the device is capable of adaptive modulation, this field shall contain a 'true'.
mimoIsAvail	Boolean false	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	In case the device is capable of MIMO, this field shall contain a 'true'.
mimoChannels	Integer 1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_8_BIT • unit: channels • support: MANDATORY	Maximum number (n) of spatial multiplexing streams that can be conveyed by an n x n MIMO configuration.
alicIsAvail	Boolean false	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	In case the microwave radio is capable of Adjacent Link Interference Cancelation (canceling of interference cause by transmitters located at the same site), this field shall contain a 'true'.
atpcIsAvail	Boolean false	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	In case the microwave radio is capable of ATPC, this field shall contain a 'true'.

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
atpcRange	Integer 0	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_8_BIT • unit: dB • support: MANDATORY	Extent of the ATPC range.
encryptionIsAvail	Boolean false	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Shall be marked 'true', if payload encryption is available.
supportedLoopBackKindList	LoopBackType NON	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	List of supported kinds of looping back of header information to the remote site.
maintenanceTimerRange	String Range of the maintenance timer not yet defined.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: s • support: MANDATORY	Available time periods for maintenance configurations (e.g. the loop back of microwave header information) to be described. Concrete values shall be separated by commas (e.g. '10, 60, 360'). Ranges shall be expressed as two values separated by a minus (e.g. '10-360').
supportedAlarms	String Supported alarms not yet defined.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Available alarms to be listed. Mandatory:'signalIsLost','rslIsExceeded', 'temperatureIsExceeded','modemIsFaulty','radioIsFaulty' and 'modulationIsDownShifted'. Further alarms might be added by the device. Names are to be separated by commas.

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
supportedChannelPlanList	ChannelPlanType ./.	1..*	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	List of channel spacing that are supported by the device.

10.1.3 AirInterfaceConfiguration

Qualified Name: MicrowaveModel::ObjectClasses::AirInterface::AirInterfaceConfiguration

Configuration of the radio link.

Applied stereotypes:
- OpenModelClass
  - objectCreationNotification: NO
  - objectDeletionNotification: NO
  - support: MANDATORY

Table 4: Attributes for AirInterfaceConfiguration

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
airInterfaceName	String Air interface ID not yet defined.	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Operator specific microwave link ID (often used for coding area, type of element and sequential number).

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
radioSignalID	String Radio signal ID not yet defined.	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	The radioSignalId is transmitted on the air interface so the remote site of the link synchronizes on the correct transmitter. The local radio MUST NOT synchronize on a radio signal with a different radioSignalId. The link ID is neither an ID necessary to span the model nor an ID referencing external data. It is just some sort of name of the link transmitted so the correct remote site can be identified in an interference situation. The value zero might be used to make the microwave to disable the link ID check.
txFrequency	Integer -1	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: kHz • support: MANDATORY	Center frequency of the transmit channel. The values to be configured have to exactly match the values listed in the international agreement referenced in channelPlanID. In case of automated selection of the transmit frequency this field shall describe the lowest center frequency selectable.
rxFrequency	Integer -1	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: kHz • support: MANDATORY	Center frequency of the receive channel.
txChannelBandwidth	Integer -1	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: kHz • support: MANDATORY	Bandwidth of the transmit channel. The value shall be expressed explicitly (means in kHz) not as a reference to an international agreement. The values shall be chosen from the following _list: 3.500, 7.000, 14.000, 27.500, 28.000, 29.000, 29.650, 30.000, 40.000, 50.000, 55.000, 56.000, 59.300, 60.000, 80.000, 100.000, 112.000, 120.000, 150.000, 200.000, 250.000, 500.000, 750.000, 1.000.000, 1.250.000, 1.500.000, 1.750.000, 2.000.000;

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
rxChannelBandwidth	Integer -1	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: kHz • support: MANDATORY	Bandwidth of the receive channel. The value shall be expressed explicitly (means in kHz) not as a reference to an international agreement. The values shall be chosen from the following _list: 3.500, 7.000, 14.000, 27.500, 28.000, 29.000, 29.650, 30.000, 40.000, 50.000, 55.000, 56.000, 59.300, 60.000, 80.000, 100.000, 112.000, 120.000, 150.000, 200.000, 250.000, 500.000, 750.000, 1.000.000, 1.250.000, 1.500.000, 1.750.000, 2.000.000;
polarization	PolarizationType NOT_SPECIFIED	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Allows documenting the polarization of the air interface.
powerIsOn	Boolean true	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Power ON. Activation of the entire radio in a split mount configuration shall be expressed as a 'true'.
transmitterIsOn	Boolean false	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Activation of the transmitter inside the radio shall be expressed as a 'true'.
receiverIsOn	Boolean true	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Maintenance Feature. Activation of the receiver inside the radio shall be expressed as a 'true'. Attribute shall also be used for RX main and RX diversity squelches in case of diversity configurations.

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
txPower	Integer 99	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: LENGTH_8_BIT • unit: dBm • support: MANDATORY	Transmit power to be configured on the microwave link. Signed Byte is required. The actually operated transmit power might be lower depending on adaptive modulation and ATPC.
adaptiveModulationIsOn	Boolean false	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Adaptive Modulation. Activation of adaptive modulation shall be expressed as a 'true'.
modulationMin	Integer -1	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: LENGTH_16_BIT • unit: symbols • support: MANDATORY	Minimum modulation to be configured (in case adaptive modulation is not used, this value represents also the fixed modulation). The modulation scheme shall be described by the number of states in the phase diagram (e.g. BPSK->'2' or 256QAM->'256'). Allowed values are defined in TypeDefinitions::transmissionModeType ::modulationScheme.
modulationMax	Integer -1	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: LENGTH_16_BIT • unit: symbols • support: MANDATORY	Maximum modulation to be configured. The value of this field is only relevant, if Adaptive Modulation has been activated. The modulation scheme shall be described by the number of states in the phase diagram (e.g. BPSK->'2' or 256QAM->'256'). Allowed values are defined in TypeDefinitions::transmissionModeType ::modulationScheme.
xpicIsOn	Boolean false	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Activation of Cross Polarization Interference Cancelation shall be expressed as a 'true'. In case XPIC is not available for the current combination of channel bandwidth and modulation or the hardware in general, this parameter shall always be set to 'false'.

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
mimoIsOn	Boolean false	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Activation of Multiple Input Multiple Output (MIMO) shall be expressed as a 'true'.
alicIsOn	Boolean false	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Activation of Adjacent Link Interference Cancelation (ALIC) shall be expressed as a 'true'.
atpcIsOn	Boolean false	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	ATPC. Activation of Automated Transmit Power Control shall be expressed as a 'true'.
atpcThreshUpper	Integer 99	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: LENGTH_16_BIT • unit: dBm • support: MANDATORY	If the receive level is higher than the upper threshold value, the transmitter is notified to decrease transmit power.
atpcThreshLower	Integer 99	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: LENGTH_16_BIT • unit: dBm • support: MANDATORY	If the receive level is lower than the lower threshold value, the transmitter is notified to increase transmit power.

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
autoFreqSelectIsOn	Boolean false	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Activation of automatically selecting the transmit frequency in unlicensed bands shall be expressed as a 'true'.
autoFreqSelectRange	Integer -1	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: LENGTH_8_BIT • unit: channels • support: MANDATORY	Number of transmit channels (starting at the center frequency defined in txFrequency and with channel bandwidth according to txChannelBandwidth) that define the range within the transmit frequency can automatically been chosen.
modulationIsOn	Boolean true	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Maintenance Feature. De-activation of the modulation of the carrier signal for fault management shall be expressed as a 'false'.
encryptionIsOn	Boolean false	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Activates encryption of the payload.
cryptographicKey	String Cryptographic key not yet defined.	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Key for transforming plaintext into ciphertext data.

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
loopBackKindOn	LoopBackType NON	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Maintenance Feature. The currently configured type of looping back of the air interface header shall be expressed here. The received header is returned to the remote site.
maintenanceTimer	Integer -1	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: s • support: MANDATORY	Time of existence of any maintenance configuration (e.g. the loop back of microwave header information). Valid values are defined in AirInterface::AirInterfaceCapability::maintenanceTimerRange.
problemKindSeverityList	AirInterfaceProblemSeverityType ./.	6..*	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Severity of the problem to be configured.

10.1.4 AirInterfaceStatus

Qualified Name: MicrowaveModel::ObjectClasses::AirInterface::AirInterfaceStatus

Measurements of current values on the air interface and operational status of the device.

Applied stereotypes:
- OpenModelClass
  - objectCreationNotification: NO
  - objectDeletionNotification: NO
  - support: MANDATORY

Table 5: Attributes for AirInterfaceStatus

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
txFrequencyCur	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: kHz • support: MANDATORY	Center frequency of the currently operated transmit channel.
rxFrequencyCur	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: kHz • support: MANDATORY	Center frequency of the currently operated receive channel.
txLevelCur	Integer 99	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: LENGTH_8_BIT • unit: dBm • support: MANDATORY	Current transmit level.
rxLevelCur	Integer 99	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: LENGTH_8_BIT • unit: dBm • support: MANDATORY	Current receive level.
modulationCur	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: LENGTH_16_BIT • unit: symbols • support: MANDATORY	Currently operated modulation on transmit path. The modulation scheme shall be described by the number of states in the phase diagram (e.g. BPSK->'2' or 256QAM->'256'). Allowed values are defined in TypeDefinitions::transmissionModeType ::modulationScheme.

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
codeRateCur	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: LENGTH_8_BIT • unit: % • support: MANDATORY	Code rate of the currently operated coding scheme (Net bit rate ≤ Gross bit rate · code rate).
snirCur	Integer -99	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: LENGTH_8_BIT • unit: dB • support: MANDATORY	Currently measured signal to (noise+interference) ratio.
xpdCur	Integer -99	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: LENGTH_8_BIT • unit: dB • support: MANDATORY	Currently measured cross polarization discrimination.
rfTempCur	Integer -99	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: LENGTH_8_BIT • unit: Celsius • support: MANDATORY	Current temperature (in degree Celsius) of the radio module inside the outdoor unit.
lastStatusChange	DateAndTime 20101120140000.0Z+1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Time the Air Interface entered its current operational status. _format:yyyyMMddhhmmss.s[Z|{+|-}HHMm]; yyyy='0000'..'9999' year; MM='01'..'12' month; dd='01'..'31' day; hh='00'..'23' hour; mm='00'..'59' minute; ss='00'..'59' second; s='.0'..'.9'tenth of second (set to '.0' if EMS or NE cannot support this granularity); Z='Z' indicates UTC (rather than local time); {+|-}='+' or '-' delta from UTC; HH='00'..'23' time zone difference in hours; Mm='00'..'59' time zone difference in minutes.

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
radioPowerIsUp	Boolean false	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	If the radio unit has power and is switched on, this shall be expressed as a 'true'.
linkIsUp	Boolean false	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	If connection is established to the remote site with the same linkID, this shall be expressed as a 'true'.
xpicIsUp	Boolean false	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	If XPIC is currently actually working (not just configured), this shall be expressed as a 'true'.
mimoIsUp	Boolean false	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	If MIMO is currently actually working (not just configured), this shall be expressed as a 'true'.
alicIsUp	Boolean false	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	If Adjacent Link Interference Cancelation (ALIC) is currently actually working (not just configured), this shall be expressed as a 'true'.

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
atpcIsUp	Boolean false	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	If ATPC is currently actually working (not just configured), this shall be expressed as a 'true'.
autoFreqSelectIsUp	Boolean false	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	If automated frequency selection is currently actually working (not just configured), this shall be expressed as a 'true'.
loopBackKindUp	LoopBackType NON	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	The currently active (not just configured) type of looping back of the air interface header shall be expressed here. The received header is returned to the remote site.
localEndPointId	String not-supported	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	The value of the localEndPointId is a vendor specific identifier of the air interface, used by the node to discover a microwave radio link.
remoteEndPointId	String not-supported	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	The value of the remoteEndPointId is a vendor specific identifier or the airinterface at the remote side, used to by the node to discover a microwave radio link.

10.1.5 AirInterfaceCurrentProblems

Qualified Name: MicrowaveModel::ObjectClasses::AirInterface::AirInterfaceCurrentProblems

Applied stereotypes:
- OpenModelClass
  - objectCreationNotification: NO
  - objectDeletionNotification: NO
  - support: MANDATORY

Table 6: Attributes for AirInterfaceCurrentProblems

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
currentProblemList	AirInterfaceCurrentProblemType ./.	0..*	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	

10.1.6 AirInterfaceCurrentPerformance

Qualified Name: MicrowaveModel::ObjectClasses::AirInterface::AirInterfaceCurrentPerformance

Aggregated performance information of the air interface at a particular moment.

Applied stereotypes:
- OpenModelClass
  - objectCreationNotification: NO
  - objectDeletionNotification: NO
  - support: MANDATORY

Table 7: Attributes for AirInterfaceCurrentPerformance

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
currentPerformanceDataList	AirInterfaceCurrentPerformanceType ./.	1..2	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	At least values of the counters, which are reset every 15 minutes, are to be provided. If available, the current values of the counters, which are reset every 24 hour, can be provided, too.

10.1.7 AirInterfaceHistoricalPerformances

Qualified Name: MicrowaveModel::ObjectClasses::AirInterface::AirInterfaceHistoricalPerformances

Aggregated performance information of the air interface for a pre-defined measurement interval.

Applied stereotypes:
- OpenModelClass
    - objectCreationNotification: NO
    - objectDeletionNotification: NO
    - support: MANDATORY

Table 8: Attributes for AirInterfaceHistoricalPerformances

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
historicalPerformanceDataList	AirInterfaceHistoricalPerformanceType ./.	0..*	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	

10.1.8 CoChannelGroup

Qualified Name: MicrowaveModel::ObjectClasses::AirInterface::CoChannelGroup

Required for configuring XPIC, MIMO and ALIC.

Applied stereotypes:

- OpenModelClass
  - objectCreationNotification: YES
  - objectDeletionNotification: YES
  - support: MANDATORY

Table 9: Attributes for CoChannelGroup

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
coChannelGroupId	UniversalId ./.	1	RW	OpenModelAttribute • partOfObjectKey: 1 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	
_airInterfaceList	LogicalTerminationPoint ./.	0..*	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	List of air interfaces, which are part of the co-channel (XPIC, MIMO, ALIC) group.
sortOfCoChannelGroup	String Kind of co-channel group not specified.	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Type of group of air interfaces with the same transmit and receive frequency. The values shall be chosen from the following _list:'XPIC', 'MIMO', 'ALIC';
_logicalterminationpoint	LogicalTerminationPoint ./.	0..*	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: NA • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class

10.2 Structure_Pacs

10.2.1 PureEthernetStructure_Pac
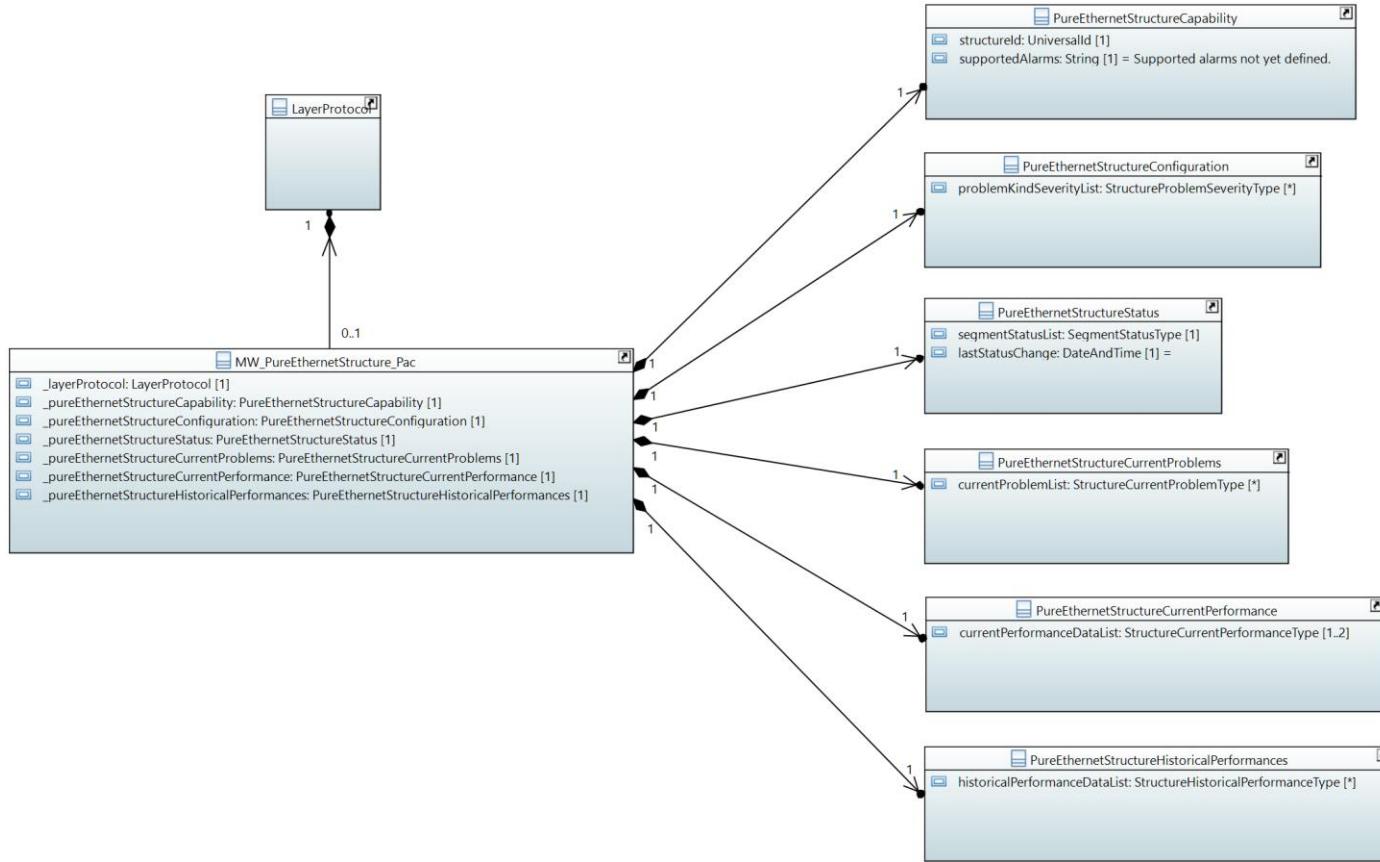
10.2.1.1   MW_PureEthernetStructure_Pac

Qualified Name: MicrowaveModel::ObjectClasses::PureEthernetStructure::MW_PureEthernetStructure_Pac

The pureEthernetStructure_Pac and its attached classes MUST be provided on management interfaces of microwave devices, which are transporting Ethernet traffic only.

Applied stereotypes:

- OpenModelClass
  - objectCreationNotification: YES
  - objectDeletionNotification: YES
  - support: CONDITIONAL_MANDATORY
  - condition: Feature 'pure-ethernet' is mandatory for device types transporting pure Ethernet.

Table 10: Attributes for MW_PureEthernetStructure_Pac

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
_layerProtocol	LayerProtocol ./.	1	RW	OpenModelAttribute • partOfObjectKey: 1 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	CoreModel-CoreNetworkModule-ObjectClasses:NetworkElement/_ltpRefList/_lpList/uuid
_pureEthernetStructureCapability	PureEthernetStructureCapability ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class
_pureEthernetStructureConfiguration	PureEthernetStructureConfiguration ./.	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class
_pureEthernetStructureStatus	PureEthernetStructureStatus ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
_pureEthernetStructureCurrentProblems	PureEthernetStructureCurrentProblems ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class
_pureEthernetStructureCurrentPerformance	PureEthernetStructureCurrentPerformance ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class
_pureEthernetStructureHistoricalPerformances	PureEthernetStructureHistoricalPerformances ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class

10.2.1.2   PureEthernetStructureCapability

Qualified Name: MicrowaveModel::ObjectClasses::PureEthernetStructure::PureEthernetStructureCapability

Describes the logical structuring of the physical capacity provided by a pure Ethernet microwave device. Segmentation is not available. No fixed segment size. No TDM transport.

Applied stereotypes:
- OpenModelClass
  - objectCreationNotification: NO
  - objectDeletionNotification: NO
  - support: MANDATORY

Table 11: Attributes for PureEthernetStructureCapability

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
structureId	UniversalId ./.	1	R	OpenModelAttribute • partOfObjectKey: 1 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Identifies the Structure for bundling and container.
supportedAlarms	String Supported alarms not yet defined.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Available alarms to be listed. Mandatory:non. Names are to be separated by commas. Further alarms might be added by the device.

10.2.1.3   PureEthernetStructureConfiguration

Qualified Name: MicrowaveModel::ObjectClasses::PureEthernetStructure::PureEthernetStructureConfiguration

Applied stereotypes:
- OpenModelClass
  - objectCreationNotification: NO
  - objectDeletionNotification: NO
  - support: MANDATORY

Table 12: Attributes for PureEthernetStructureConfiguration

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
problemKindSeverityList	StructureProblemSeverity Type ./.	0..*	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Severity of the type of problem to be configured.

10.2.1.4   PureEthernetStructureStatus

Qualified Name: MicrowaveModel::ObjectClasses::PureEthernetStructure::PureEthernetStructureStatus

Applied stereotypes:
- OpenModelClass
  - objectCreationNotification: NO
  - objectDeletionNotification: NO
  - support: MANDATORY

Table 13: Attributes for PureEthernetStructureStatus

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
segmentStatusList	SegmentStatusType ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Status of the Ethernet transport segment. Always just one segment.
lastStatusChange	DateAndTime 20101120140000.0Z+1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Time and date of the last update of the status information. _format:yyyyMMddhhmmss.s[Z|{+|-}HHMm]; yyyy='0000'..'9999' year; MM='01'..'12' month; dd='01'..'31' day; hh='00'..'23' hour; mm='00'..'59' minute; ss='00'..'59' second; s='.0'..'.9'tenth of second (set to '.0' if EMS or NE cannot support this granularity); Z='Z' indicates UTC (rather than local time); {+|-}='+' or '-' delta from UTC; HH='00'..'23' time zone difference in hours; Mm='00'..'59' time zone difference in minutes.

10.2.1.5   PureEthernetStructureCurrentProblems

Qualified Name: MicrowaveModel::ObjectClasses::PureEthernetStructure::PureEthernetStructureCurrentProblems

Applied stereotypes:
- OpenModelClass
  - objectCreationNotification: NO

- objectDeletionNotification: NO
- support: MANDATORY

Table 14: Attributes for PureEthernetStructureCurrentProblems

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
currentProblemList	StructureCurrentProblemType ./.	0..*	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	

10.2.1.6   PureEthernetStructureCurrentPerformance

Qualified Name: MicrowaveModel::ObjectClasses::PureEthernetStructure::PureEthernetStructureCurrentPerformance

Aggregated performance information of the structure of an pure Ethernet microwave at a particular moment.

Applied stereotypes:
- OpenModelClass
    - objectCreationNotification: NO
    - objectDeletionNotification: NO
    - support: MANDATORY

Table 15: Attributes for PureEthernetStructureCurrentPerformance

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
currentPerformanceDataList	StructureCurrentPerformanceType ./.	1..2	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	At least values of the counters, which are reset every 15 minutes, are to be provided. If available, the current values of the counters, which are reset every 24 hour, can be provided, too.

10.2.1.7   PureEthernetStructureHistoricalPerformances

Qualified Name: MicrowaveModel::ObjectClasses::PureEthernetStructure::PureEthernetStructureHistoricalPerformances

Aggregated performance information of the structure of an pure Ethernet microwave for a pre-defined measurement interval.

Applied stereotypes:
- OpenModelClass
  - objectCreationNotification: NO
  - objectDeletionNotification: NO
  - support: MANDATORY

Table 16: Attributes for PureEthernetStructureHistoricalPerformances

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
historicalPerformanceDataList	StructureHistoricalPerformanceType ./.	0..*	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	

10.2.2 HybridMwStructure_Pac
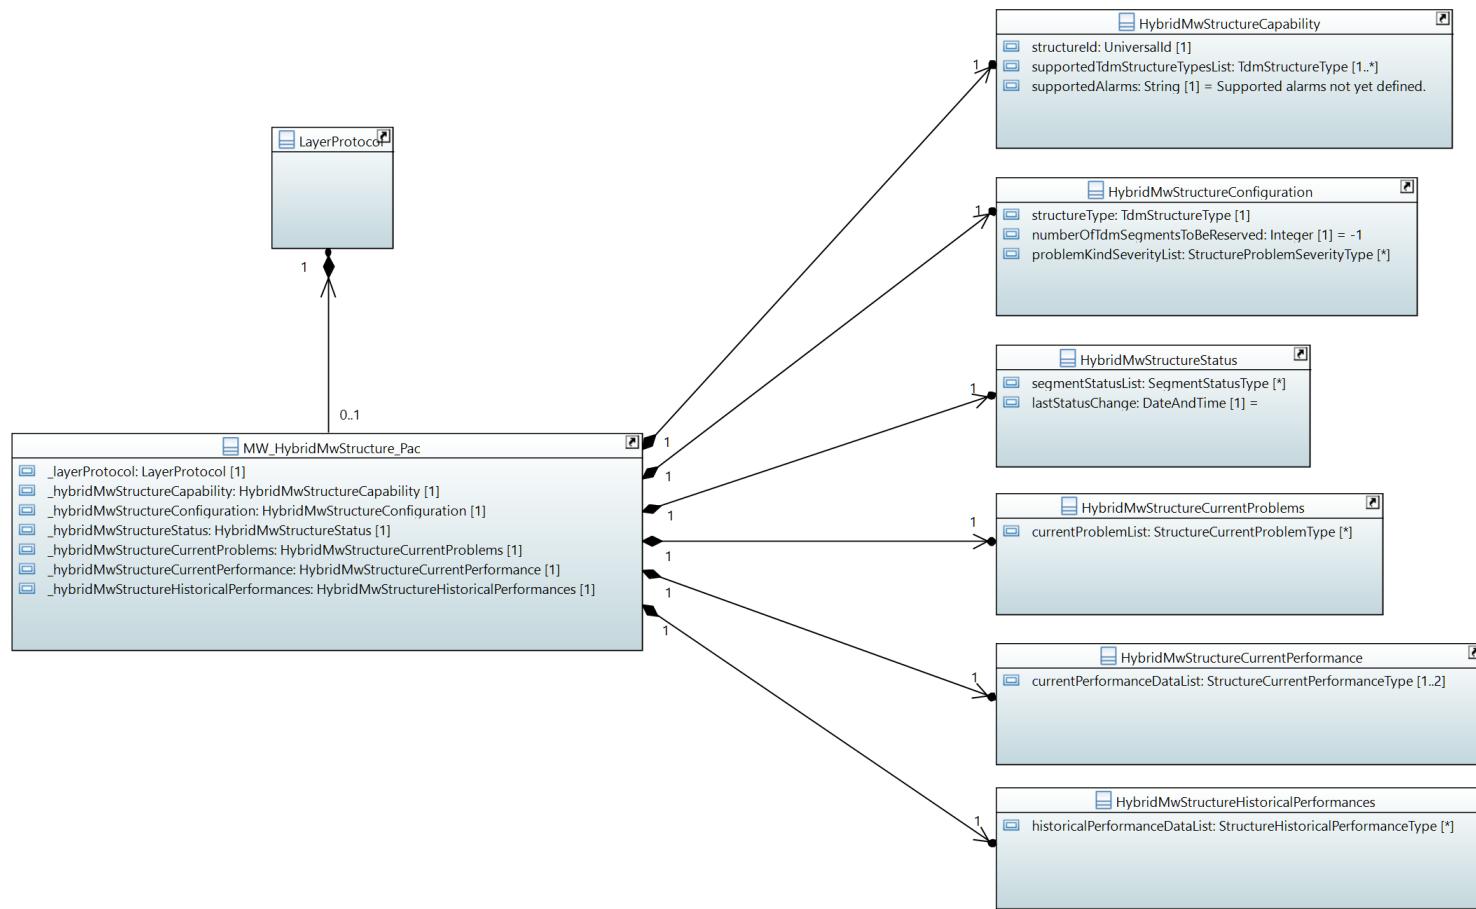
10.2.2.1   MW_HybridMwStructure_Pac

Qualified Name: MicrowaveModel::ObjectClasses::HybridMwStructure::MW_HybridMwStructure_Pac

The HybridMwStructure_Pac and its attached classes MUST be provided on management interfaces of microwave devices, which are transporting TDM and Ethernet traffic.

Applied stereotypes:
- OpenModelClass

- objectCreationNotification: YES
- objectDeletionNotification: YES
- support: CONDITIONAL_MANDATORY
- condition: Feature 'hybrid-microwave' is mandatory for device types transporting Ethernet + TDM.

Table 17: Attributes for MW_HybridMwStructure_Pac

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
_layerProtocol	LayerProtocol ./.	1	RW	OpenModelAttribute • partOfObjectKey: 1 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	CoreModel-CoreNetworkModule-ObjectClasses:NetworkElement/_ltpRefList/_lpList/uuid
_hybridMwStructureCapability	HybridMwStructureCapability ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class
_hybridMwStructureConfiguration	HybridMwStructureConfiguration ./.	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class
_hybridMwStructureStatus	HybridMwStructureStatus ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
_hybridMwStructureCurrentProblems	HybridMwStructureCurrentProblems ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class
_hybridMwStructureCurrentPerformance	HybridMwStructureCurrentPerformance ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class
_hybridMwStructureHistoricalPerformances	HybridMwStructureHistoricalPerformances ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class

10.2.2.2   HybridMwStructureCapability

Qualified Name: MicrowaveModel::ObjectClasses::HybridMwStructure::HybridMwStructureCapability

Describes the logical structuring of the physical capacity provided by a hybrid microwave device (TDM + Ethernet). Segmentation is available. TDM transport is available.

Applied stereotypes:
- OpenModelClass
  - objectCreationNotification: NO
  - objectDeletionNotification: NO
  - support: MANDATORY

Table 18: Attributes for HybridMwStructureCapability

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
structureId	UniversalId ./.	1	R	OpenModelAttribute • partOfObjectKey: 1 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Identifies the Structure for bundling and container.
supportedTdmStructureTypesList	TdmStructureType ./.	1..*	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Lists the TDM frame types that are supported.
supportedAlarms	String Supported alarms not yet defined.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Available alarms to be listed. Mandatory:non. Names are to be separated by commas. Further alarms might be added by the device.

10.2.2.3   HybridMwStructureConfiguration

Qualified Name: MicrowaveModel::ObjectClasses::HybridMwStructure::HybridMwStructureConfiguration

Applied stereotypes:
- OpenModelClass
  - objectCreationNotification: NO
  - objectDeletionNotification: NO
  - support: MANDATORY

Table 19: Attributes for HybridMwStructureConfiguration

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
structureType	TdmStructureType ./.	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	TDM frame to be applied.
numberOfTdmSegmentsToBeReserved	Integer -1	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: LENGTH_16_BIT • unit: no unit defined • support: MANDATORY	Allows to configure the number of segments reserved for TDM frames of the type specified in HybridMwStructure::HybridMwStructureConfiguration::structureType
problemKindSeverityList	StructureProblemSeverityType ./.	0..*	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Severity of the type of problem to be configured.

10.2.2.4   HybridMwStructureStatus

Qualified Name: MicrowaveModel::ObjectClasses::HybridMwStructure::HybridMwStructureStatus

Applied stereotypes:
- OpenModelClass
  - objectCreationNotification: NO
  - objectDeletionNotification: NO
  - support: MANDATORY

Table 20: Attributes for HybridMwStructureStatus

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
segmentStatusList	SegmentStatusType ./.	0..*	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Status of each segment (all TDM and one Ethernet). Multiplicity = HybridMwStructure::StructureConfiguration::tdmReservedNumberOfSegments + 1
lastStatusChange	DateAndTime 20101120140000.0Z+1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Time and date of the last update of the status information. _format:yyyyMMddhhmmss.s[Z|{+|-}HHMm]; yyyy='0000'..'9999' year; MM='01'..'12' month; dd='01'..'31' day; hh='00'..'23' hour; mm='00'..'59' minute; ss='00'..'59' second; s='.0'..'.9'tenth of second (set to '.0' if EMS or NE cannot support this granularity); Z='Z' indicates UTC (rather than local time); {+|-}='+' or '-' delta from UTC; HH='00'..'23' time zone difference in hours; Mm='00'..'59' time zone difference in minutes.

10.2.2.5   HybridMwStructureCurrentProblems

Qualified Name: MicrowaveModel::ObjectClasses::HybridMwStructure::HybridMwStructureCurrentProblems

Applied stereotypes:
- OpenModelClass
  - objectCreationNotification: NO
  - objectDeletionNotification: NO
- support: MANDATORY

Table 21: Attributes for HybridMwStructureCurrentProblems

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
currentProblemList	StructureCurrentProblemType ./.	0..*	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	

10.2.2.6 HybridMwStructureCurrentPerformance

Qualified Name: MicrowaveModel::ObjectClasses::HybridMwStructure::HybridMwStructureCurrentPerformance

Aggregated performance information of the structure of a hybrid microwave at a particular moment.

Applied stereotypes:
- OpenModelClass
    - objectCreationNotification: NO
    - objectDeletionNotification: NO
    - support: MANDATORY

Table 22: Attributes for HybridMwStructureCurrentPerformance

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
currentPerformanceDataList	StructureCurrentPerformanceType ./.	1..2	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	At least values of the counters, which are reset every 15 minutes, are to be provided. If available, the current values of the counters, which are reset every 24 hour, can be provided, too.

10.2.2.7 HybridMwStructureHistoricalPerformances

Qualified Name: MicrowaveModel::ObjectClasses::HybridMwStructure::HybridMwStructureHistoricalPerformances

Aggregated performance information of the structure of a hybrid microwave for a pre-defined measurement interval.

Applied stereotypes:

- OpenModelClass
  - objectCreationNotification: NO
  - objectDeletionNotification: NO
  - support: MANDATORY

Table 23: Attributes for HybridMwStructureHistoricalPerformances

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
historicalPerformanceDataList	StructureHistoricalPerformanceType ./.	0..*	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	

10.3 Container_Pacs

10.3.1 EthernetContainer
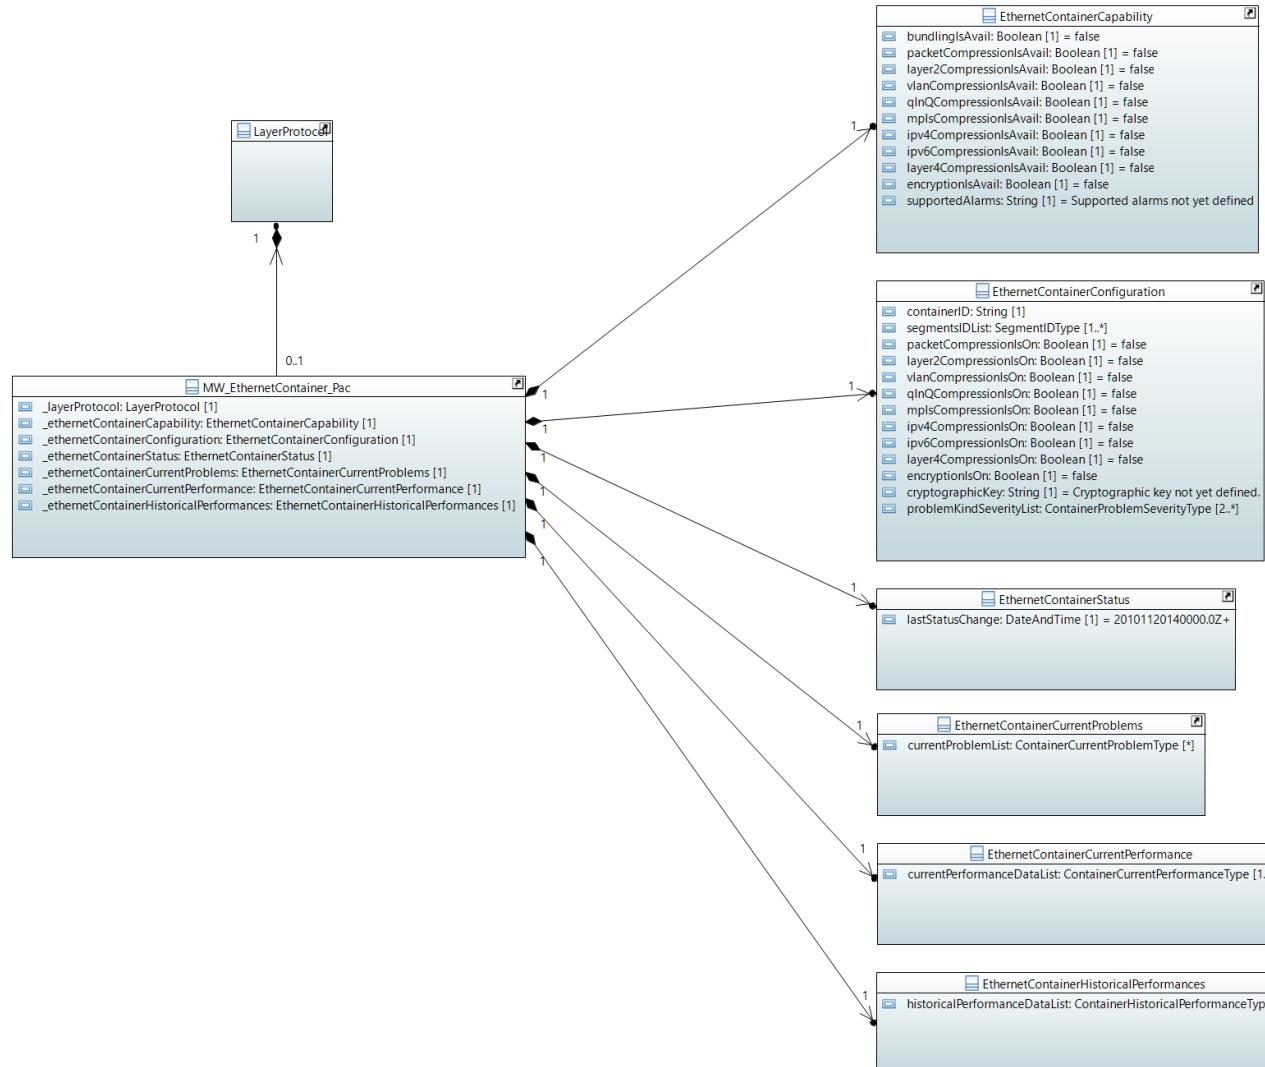
10.3.1.1   MW_EthernetContainer_Pac

Qualified Name: MicrowaveModel::ObjectClasses::EthernetContainer::MW_EthernetContainer_Pac

Applied stereotypes:

- OpenModelClass
  - objectCreationNotification: YES
  - objectDeletionNotification: YES
  - support: MANDATORY

Table 24: Attributes for MW_EthernetContainer_Pac

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
_layerProtocol	LayerProtocol ./.	1	RW	OpenModelAttribute • partOfObjectKey: 1 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	CoreModel-CoreNetworkModule-ObjectClasses:NetworkElement/_ltpRefList/_lpList/uuid
_ethernetContainerCapability	EthernetContainerCapability ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class
_ethernetContainerConfiguration	EthernetContainerConfiguration ./.	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class
_ethernetContainerStatus	EthernetContainerStatus ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
_ethernetContainerCurrentProblems	EthernetContainerCurrentProblems ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class
_ethernetContainerCurrentPerformance	EthernetContainerCurrentPerformance ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class
_ethernetContainerHistoricalPerformances	EthernetContainerHistoricalPerformances ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class

10.3.1.2   EthernetContainerCapability

Qualified Name: MicrowaveModel::ObjectClasses::EthernetContainer::EthernetContainerCapability


Applied stereotypes:
- OpenModelClass
    - objectCreationNotification: NO
    - objectDeletionNotification: NO
    - support: MANDATORY

Table 25: Attributes for EthernetContainerCapability

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
bundlingIsAvail	Boolean false	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	This attribute has to be set on 'true', if the device allows combining resources from several air interfaces for transporting this Ethernet container.
packetCompressionIsAvail	Boolean false	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	In case packet compression can be activated, but not configured to a certain type, packetCompressionAvail shall be set on 'true', but none of the compression level specific booleans.
layer2CompressionIsAvail	Boolean false	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Packet compression on layer 2 available at the device.
vlanCompressionIsAvail	Boolean false	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Packet compression on VLAN layer available at the device.
qInQCompressionIsAvail	Boolean false	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Packet compression on layer of a second VLAN available at the device.

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
mplsCompressionIsAvail	Boolean false	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Packet compression on mpls layer available at the device.
ipv4CompressionIsAvail	Boolean false	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Packet compression on layer 3 for IPv4 available at the device.
ipv6CompressionIsAvail	Boolean false	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Packet compression on layer 3 for IPv6 available at the device.
layer4CompressionIsAvail	Boolean false	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Packet compression on layer 4 (TCP and UDP header) available at the device.
encryptionIsAvail	Boolean false	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Shall be marked 'true', if Ethernet payload encryption is available.

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
supportedAlarms	String Supported alarms not yet defined.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Available alarms to be listed. Mandatory:'framingIsFaulty' and 'containerIsDown'. Further alarms might be added by the device.

10.3.1.3   EthernetContainerConfiguration

Qualified Name: MicrowaveModel::ObjectClasses::EthernetContainer::EthernetContainerConfiguration

Applied stereotypes:
- OpenModelClass
  - objectCreationNotification: NO
  - objectDeletionNotification: NO
  - support: MANDATORY

Table 26: Attributes for EthernetContainerConfiguration

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
containerID	String No Ethernet Flow associated yet.	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	ContainterID in Netconf must be the same as EthernetPortID in OpenFlow so a connection can be made between the two items, which separately exist in the controller.
segmentsIDList	SegmentIDType ./.	1..*	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Lists the segments used for transporting this Ethernet container. In case EthernetContainer::ContainerCapability::bundlingIsAvail==0, all TypeDefinitions::segmentIdType::structureId must be identical in the list.

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
packetCompressionIsOn	Boolean false	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	In case packet compression is activated, but no type is activated, it is assumed that the device chooses the optimum.
layer2CompressionIsOn	Boolean false	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Packet compression on layer 2 configured at the device.
vlanCompressionIsOn	Boolean false	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Packet compression on VLAN layer configured at the device.
qInQCompressionIsOn	Boolean false	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Packet compression on layer of a second VLAN configured at the device.
mplsCompressionIsOn	Boolean false	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Packet compression on MPLS layer configured at the device.

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
ipv4CompressionIsOn	Boolean false	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Packet compression on layer 3 for IPv4 configured at the device.
ipv6CompressionIsOn	Boolean false	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Packet compression on layer 3 for IPv6 configured at the device.
layer4CompressionIsOn	Boolean false	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Packet compression on layer 4 (TCP and UDP header) configured at the device.
encryptionIsOn	Boolean false	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Activates encryption of the Ethernet payload.
cryptographicKey	String Cryptographic key not yet defined.	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Key for transforming plaintext into cipher text data.

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
problemKindSeverityList	ContainerProblemSeverityType ./.	2..*	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Severity of the problem to be configured.

10.3.1.4   EthernetContainerStatus

Qualified Name: MicrowaveModel::ObjectClasses::EthernetContainer::EthernetContainerStatus

Applied stereotypes:
- OpenModelClass
    - objectCreationNotification: NO
    - objectDeletionNotification: NO
    - support: MANDATORY

Table 27: Attributes for EthernetContainerStatus

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
lastStatusChange	DateAndTime 20101120140000.0Z+1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Time the Container entered its current operational status. _format:yyyyMMddhhmmss.s[Z|{+|-}HHMm]; yyyy='0000'..'9999' year; MM='01'..'12' month; dd='01'..'31' day; hh='00'..'23' hour; mm='00'..'59' minute; ss='00'..'59' second; s='.0'..'.9'tenth of second (set to '.0' if EMS or NE cannot support this granularity); Z='Z' indicates UTC (rather than local time); {+|-}='+' or '-' delta from UTC; HH='00'..'23' time zone difference in hours; Mm='00'..'59' time zone difference in minutes.

10.3.1.5   EthernetContainerCurrentProblems

Qualified Name: MicrowaveModel::ObjectClasses::EthernetContainer::EthernetContainerCurrentProblems

Applied stereotypes:
- OpenModelClass
  - objectCreationNotification: NO
  - objectDeletionNotification: NO
  - support: MANDATORY

Table 28: Attributes for EthernetContainerCurrentProblems

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
currentProblemList	ContainerCurrentProblemType ./.	0..*	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	

10.3.1.6   EthernetContainerCurrentPerformance

Qualified Name: MicrowaveModel::ObjectClasses::EthernetContainer::EthernetContainerCurrentPerformance

Aggregated performance information of the Ethernet container at a particular moment.

Applied stereotypes:
- OpenModelClass
  - objectCreationNotification: NO
  - objectDeletionNotification: NO
  - support: MANDATORY

Table 29: Attributes for EthernetContainerCurrentPerformance

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
currentPerformanceDataList	ContainerCurrentPerformanceType ./.	1..2	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	

10.3.1.7 EthernetContainerHistoricalPerformances

Qualified Name: MicrowaveModel::ObjectClasses::EthernetContainer::EthernetContainerHistoricalPerformances

Aggregated performance information of the Ethernet container for a pre-defined measurement interval.

Applied stereotypes:
- OpenModelClass
  - objectCreationNotification: NO
  - objectDeletionNotification: NO
  - support: MANDATORY

Table 30: Attributes for EthernetContainerHistoricalPerformances

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
historicalPerformanceDataList	ContainerHistoricalPerformanceType ./.	0..*	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	

© Open Networking Foundation

10.3.2 TdmContainer

10.3.2.1   MW_TdmContainer_Pac

Qualified Name: MicrowaveModel::ObjectClasses::TdmContainer::MW_TdmContainer_Pac

Applied stereotypes:

- OpenModelClass
  - objectCreationNotification: YES

- objectDeletionNotification: YES
- support: CONDITIONAL_MANDATORY
- condition: Feature 'hybrid-microwave' is mandatory for device types transporting Ethernet + TDM.

Table 31: Attributes for MW_TdmContainer_Pac

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
_layerProtocol	LayerProtocol ./.	1	RW	OpenModelAttribute • partOfObjectKey: 1 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	CoreModel-CoreNetworkModule-ObjectClasses:NetworkElement/_ltpRefList/_lpList/uuid
_tdmContainerCapability	TdmContainerCapability ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class
_tdmContainerConfiguration	TdmContainerConfiguration ./.	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class
_tdmContainerStatus	TdmContainerStatus ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
_tdmContainerCurrentProblems	TdmContainerCurrentProblems ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class
_tdmContainerCurrentPerformance	TdmContainerCurrentPerformance ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class
_tdmContainerHistoricalPerformances	TdmContainerHistoricalPerformances ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class

10.3.2.2   TdmContainerCapability

Qualified Name: MicrowaveModel::ObjectClasses::TdmContainer::TdmContainerCapability

Bundling is not available.

Applied stereotypes:
- OpenModelClass
  - objectCreationNotification: NO
  - objectDeletionNotification: NO
  - support: MANDATORY

Table 32: Attributes for TdmContainerCapability

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
supportedTdmContainerTypesList	TdmContainerType ./.	1..*	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Lists the TDM containers that are supported.
supportedAlarms	String Supported alarms not yet defined.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Available alarms to be listed. Mandatory:'framingIsFaulty' and 'containerIsDown'. Further alarms might be added by the device.

10.3.2.3   TdmContainerConfiguration

Qualified Name: MicrowaveModel::ObjectClasses::TdmContainer::TdmContainerConfiguration

Applied stereotypes:
- OpenModelClass
  - objectCreationNotification: NO
  - objectDeletionNotification: NO
  - support: MANDATORY

Table 33: Attributes for TdmContainerConfiguration

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
containerID	String No TDM Flow associated yet.	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	ContainerID in Netconf must be the same as TDM Flow ID so a connection can be made between the two items, which separately exist in the controller.

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
containerType	TdmContainerType ./.	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Type of TDM container.
segmentID	SegmentIDType ./.	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Multiplicity = 1; One segment per TDM container; Type of segment must match type of container;
problemKindSeverityList	ContainerProblemSeverity Type ./.	2..*	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Severity of the problem to be configured.

10.3.2.4   TdmContainerStatus

Qualified Name: MicrowaveModel::ObjectClasses::TdmContainer::TdmContainerStatus

Applied stereotypes:
- OpenModelClass
  - objectCreationNotification: NO
  - objectDeletionNotification: NO
  - support: MANDATORY

Table 34: Attributes for TdmContainerStatus

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
lastStatusChange	DateAndTime 20101120140000.0Z+1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Time the Container entered its current operational status. _format:yyyyMMddhhmmss.s[Z|{+|-}HHMm]; yyyy='0000'..'9999' year; MM='01'..'12' month; dd='01'..'31' day; hh='00'..'23' hour; mm='00'..'59' minute; ss='00'..'59' second; s='.0'..'.9'tenth of second (set to '.0' if EMS or NE cannot support this granularity); Z='Z' indicates UTC (rather than local time); {+|-}='+' or '-' delta from UTC; HH='00'..'23' time zone difference in hours; Mm='00'..'59' time zone difference in minutes.

10.3.2.5 TdmContainerCurrentProblems

Qualified Name: MicrowaveModel::ObjectClasses::TdmContainer::TdmContainerCurrentProblems

Applied stereotypes:
- OpenModelClass
  - objectCreationNotification: NO
  - objectDeletionNotification: NO
  - support: MANDATORY

Table 35: Attributes for TdmContainerCurrentProblems

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
currentProblemList	ContainerCurrentProblem Type ./.	0..*	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	

10.3.2.6 TdmContainerCurrentPerformance

Qualified Name: MicrowaveModel::ObjectClasses::TdmContainer::TdmContainerCurrentPerformance

Aggregated performance information of the TDM container at a particular moment.

Applied stereotypes:
- OpenModelClass
    - objectCreationNotification: NO
    - objectDeletionNotification: NO
    - support: MANDATORY

Table 36: Attributes for TdmContainerCurrentPerformance

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
currentPerformanceDataList	ContainerCurrentPerformanceType ./.	1..2	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	At least values of the counters, which are reset every 15 minutes, are to be provided. If available, the current values of the counters, which are reset every 24 hour, can be provided, too.

10.3.2.7　TdmContainerHistoricalPerformances

Qualified Name: MicrowaveModel::ObjectClasses::TdmContainer::TdmContainerHistoricalPerformances

Aggregated performance information of the TDM container for a pre-defined measurement interval.

Applied stereotypes:
- OpenModelClass
    - objectCreationNotification: NO
    - objectDeletionNotification: NO
    - support: MANDATORY

Table 37: Attributes for TdmContainerHistoricalPerformances

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
historicalPerformanceDataList	ContainerHistoricalPerformanceType ./.	0..*	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	

10.4 AirInterfaceHsb
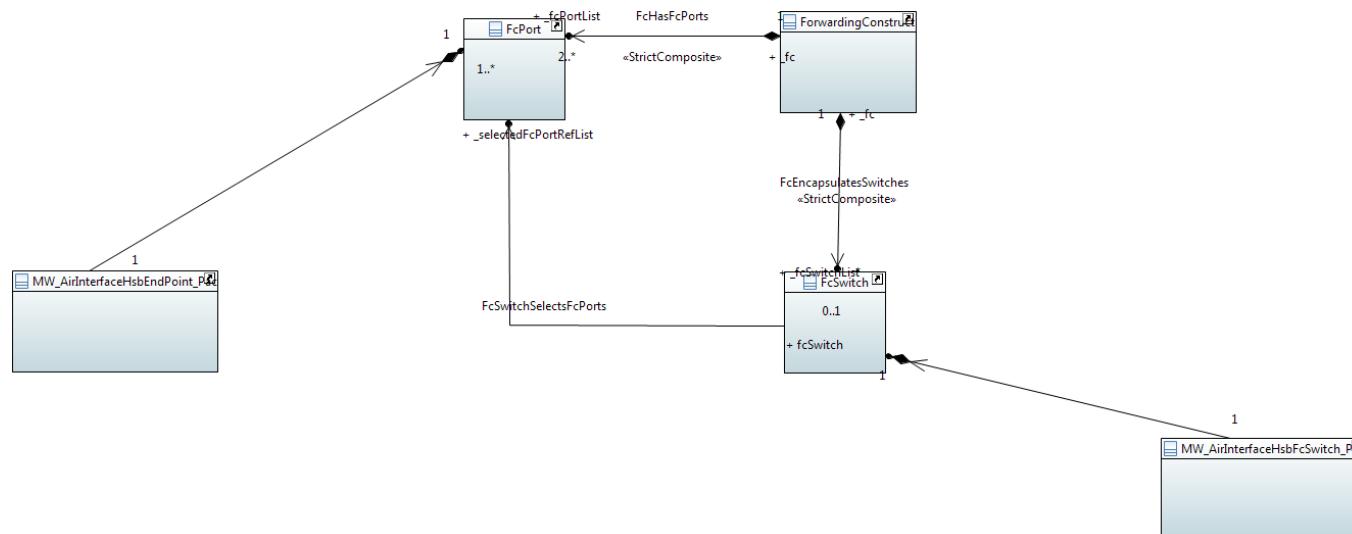
10.4.1 MW_AirInterfaceHsbFcSwitch_Pac

Qualified Name: MicrowaveModel::ObjectClasses::AirInterfaceHsb::MW_AirInterfaceHsbFcSwitch_Pac

Represents and defines a protection switch structure encapsulated in the forwarding construct. Essentially performs the function of Protection Group. Associates to 2 or more Endpoints each playing the role of a Protection Unit. One or more protection EndPoints (standby/backup) provide protection for one or more working (i.e. regular/main/preferred) Endpoints where either protection or working can feed one or more protected Endpoint. May be used in revertive or non-revertive (symmetric) mode. When in revertive mode may define waitToRestore time. May be used in one of several modes including source switch, destination switched, source and destination switched etc (covering cases such as 1+1 ane 1:1). May be lockout (prevented from switching), force switched or manual switched. Will indicate switch state and change of state.

Applied stereotypes:
- OpenModelClass
  - objectCreationNotification: YES
  - objectDeletionNotification: YES
  - support: MANDATORY

**Table 38: Attributes for MW_AirInterfaceHsbFcSwitch_Pac**

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
protType	ProtectionType HSB	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Indicates the protection scheme that is used for the ProtectionGroup.
airInterfaceHsbConfigurationIsFaultySeverity	SeverityType WARNING	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	The level of severity of an airInterfaceHsbConfigurationIsFaulty alarm shall be chosen from an enumeration.
airInterfaceHsbIsPartlyDownSeverity	SeverityType WARNING	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	The level of severity for one link out of the HSB configuration being down shall be chosen from an enumeration.
airInterfaceHsbIsDownSeverity	SeverityType WARNING	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	The level of severity of the total HSB configuration being down shall be chosen from an enumeration.

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
_fcswitch	FcSwitch ./.	1	RW	OpenModelAttribute • partOfObjectKey: 1 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class

10.4.2 MW_AirInterfaceHsbEndPoint_Pac

Qualified Name: MicrowaveModel::ObjectClasses::AirInterfaceHsb::MW_AirInterfaceHsbEndPoint_Pac

The EndPoint (EP) object class models the access to the FC function. Each EndPoint instance has a role (e.g., working, protection, protected, hub, spoke, leaf, root, etc.) with respect to the FC function. The association of the FC to LTPs is made via EndPoints (essentially the ports of the FC) where each EndPoint (EP) of the FC has a role in the context of the FC. The traffic forwarding between the associated End PointsEPs of the FC depends upon the type of FC and may be associated with FCSwitch object instances. In cases where there is protection conveys the protecting role of the access to the FC. The EP replaces the Protection Unit of a traditional protection model. It represents a protected (resilient/reliable) point or a protecting (unreliable working or protection) point.

Applied stereotypes:
- OpenModelClass
  - objectCreationNotification: YES
  - objectDeletionNotification: YES
  - support: MANDATORY

Table 39: Attributes for MW_AirInterfaceHsbEndPoint_Pac

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
role	RoleType WORKING	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
_endpoint	FcPort ./.	1	RW	OpenModelAttribute • partOfObjectKey: 1 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class

10.5 AirInterfaceDiversity_Pac
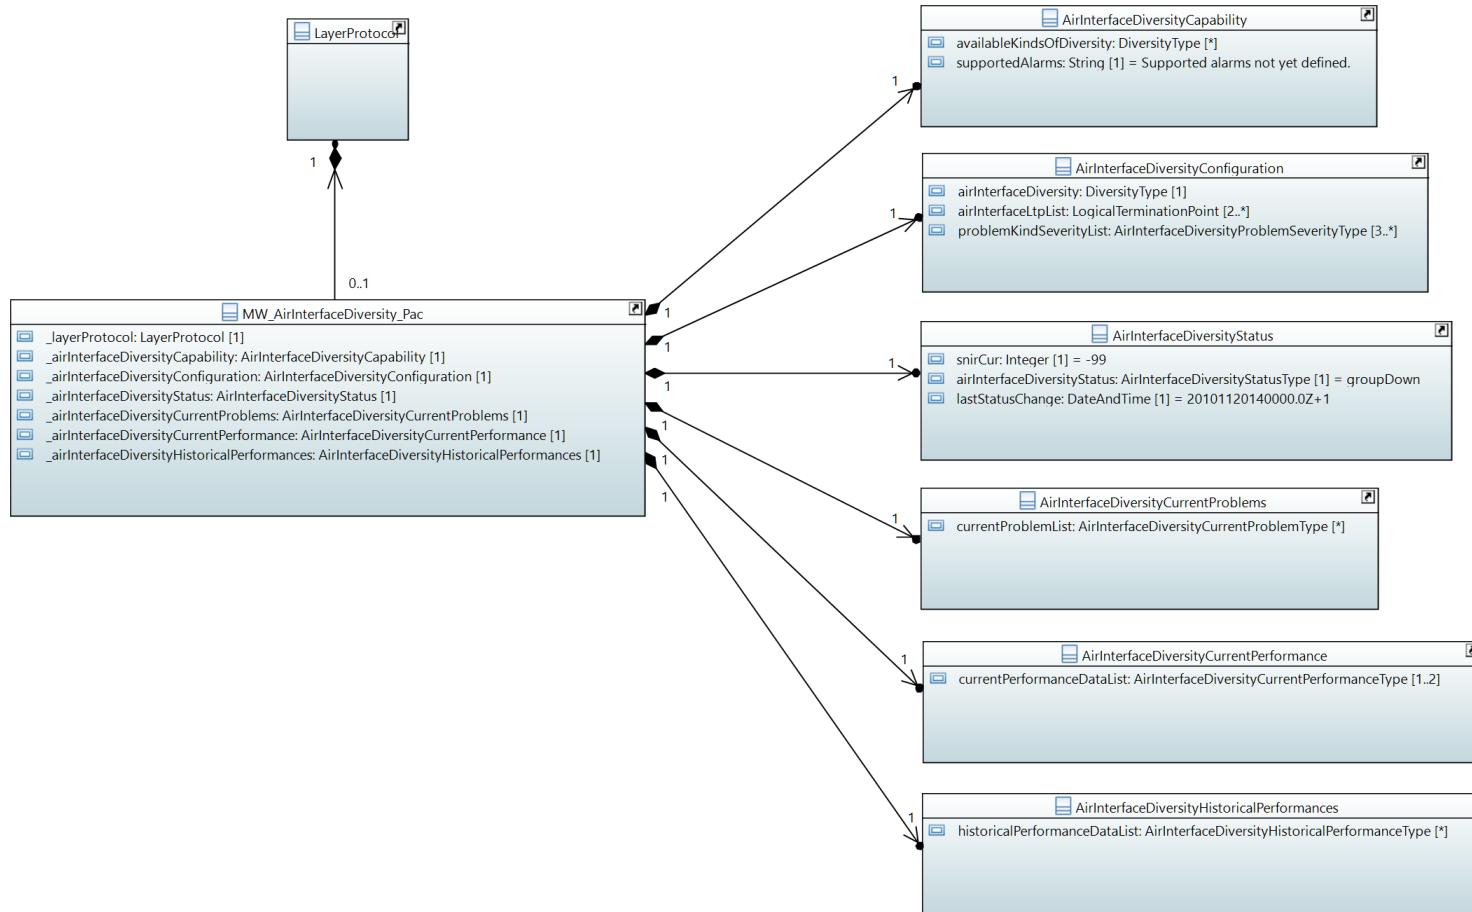
10.5.1 MW_AirInterfaceDiversity_Pac

Qualified Name: MicrowaveModel::ObjectClasses::AirInterfaceDiversity::MW_AirInterfaceDiversity_Pac

Applied stereotypes:
- OpenModelClass
  - objectCreationNotification: YES
  - objectDeletionNotification: YES

- support: MANDATORY

Table 40: Attributes for MW_AirInterfaceDiversity_Pac

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
_layerProtocol	LayerProtocol ./.	1	RW	OpenModelAttribute • partOfObjectKey: 1 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	CoreModel-CoreNetworkModule-ObjectClasses:NetworkElement/_ltpRefList/_lpList/uuid
_airInterfaceDiversityCapability	AirInterfaceDiversityCapability ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class
_airInterfaceDiversityConfiguration	AirInterfaceDiversityConfiguration ./.	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class
_airInterfaceDiversityStatus	AirInterfaceDiversityStatus ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class
_airInterfaceDiversityCurrentProblems	AirInterfaceDiversityCurrentProblems ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
_airInterfaceDiversityCurrentPerformance	AirInterfaceDiversityCurrentPerformance ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class
_airInterfaceDiversityHistoricalPerformances	AirInterfaceDiversityHistoricalPerformances ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	See referenced class

10.5.2 AirInterfaceDiversityCapability

Qualified Name: MicrowaveModel::ObjectClasses::AirInterfaceDiversity::AirInterfaceDiversityCapability

Describes the capabilities in implementing different types of air interface diversity.

Applied stereotypes:
- OpenModelClass
  - objectCreationNotification: NO
  - objectDeletionNotification: NO
  - support: MANDATORY

Table 41: Attributes for AirInterfaceDiversityCapability

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
availableKindsOfDiversity	DiversityType ./.	0..*	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Available types of diversity to be listed.

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
supportedAlarms	String Supported alarms not yet defined.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Available alarms to be listed. Mandatory:'airInterfaceDiversityConfigurationIsPartlyDown' (at least one air interface is down, but not all of them) and 'airInterfaceDiversityConfigurationIsDown' (all air interfaces are down). Further alarms might be added by the device. Names are to be separated by commas.

10.5.3 AirInterfaceDiversityConfiguration

Qualified Name: MicrowaveModel::ObjectClasses::AirInterfaceDiversity::AirInterfaceDiversityConfiguration

Applied stereotypes:
* OpenModelClass
  * objectCreationNotification: NO
  * objectDeletionNotification: NO
  * support: MANDATORY

Table 42: Attributes for AirInterfaceDiversityConfiguration

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
airInterfaceDiversity	DiversityType ./.	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Type of air interface diversity configured at the link.
_airInterfaceLtpList	LogicalTerminationPoint ./.	2..*	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	_multiplicity:2-ThisAirInterfaceDiversity::AirInterfaceDiversityConfiguration::airInterfaceDiversity::diversityType::numberOfAirInterfacesMax

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
problemKindSeverityList	AirInterfaceDiversityProblemSeverityType ./.	3..*	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Severity of the problem to be configured.

10.5.4 AirInterfaceDiversityStatus

Qualified Name: MicrowaveModel::ObjectClasses::AirInterfaceDiversity::AirInterfaceDiversityStatus

Applied stereotypes:
- OpenModelClass
  - objectCreationNotification: NO
  - objectDeletionNotification: NO
  - support: MANDATORY

Table 43: Attributes for AirInterfaceDiversityStatus

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
snirCur	Integer -99	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: LENGTH_8_BIT • unit: dB • support: MANDATORY	Currently measured signal to (noise+interference) ratio of the combined signals.
airInterfaceDiversityStatus	AirInterfaceDiversityStatusType GROUP_DOWN	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Status of the air interface bundle.

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
lastStatusChange	DateAndTime 20101120140000.0Z+1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Time the Diversity Group entered its current operational status. _format:yyyyMMddhhmmss.s[Z|{+|-}HHMm]; yyyy='0000'..'9999' year; MM='01'..'12' month; dd='01'..'31' day; hh='00'..'23' hour; mm='00'..'59' minute; ss='00'..'59' second; s='.0'..'.9'tenth of second (set to '.0' if EMS or NE cannot support this granularity); Z='Z' indicates UTC (rather than local time); {+|-}='+' or '-' delta from UTC; HH='00'..'23' time zone difference in hours; Mm='00'..'59' time zone difference in minutes.

10.5.5 AirInterfaceDiversityCurrentProblems

Qualified Name: MicrowaveModel::ObjectClasses::AirInterfaceDiversity::AirInterfaceDiversityCurrentProblems

Applied stereotypes:
- OpenModelClass
  - objectCreationNotification: NO
  - objectDeletionNotification: NO
  - support: MANDATORY

Table 44: Attributes for AirInterfaceDiversityCurrentProblems

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
currentProblemList	AirInterfaceDiversityCurrentProblemType ./.	0..*	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	

10.5.6 AirInterfaceDiversityCurrentPerformance

Qualified Name: MicrowaveModel::ObjectClasses::AirInterfaceDiversity::AirInterfaceDiversityCurrentPerformance

Aggregated performance information of the air interface diversity configuration at a particular moment.

Applied stereotypes:
- OpenModelClass
  - objectCreationNotification: NO
  - objectDeletionNotification: NO
  - support: MANDATORY

Table 45: Attributes for AirInterfaceDiversityCurrentPerformance

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
currentPerformanceDataList	AirInterfaceDiversityCurrentPerformanceType ./.	1..2	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	At least values of the counters, which are reset every 15 minutes, are to be provided. If available, the current values of the counters, which are reset every 24 hour, can be provided, too.

10.5.7 AirInterfaceDiversityHistoricalPerformances

Qualified Name: MicrowaveModel::ObjectClasses::AirInterfaceDiversity::AirInterfaceDiversityHistoricalPerformances

Aggregated performance information of the air interface diversity configuration for a pre-defined measurement interval.

Applied stereotypes:
- OpenModelClass
  - objectCreationNotification: NO
  - objectDeletionNotification: NO
  - support: MANDATORY

Table 46: Attributes for AirInterfaceDiversityHistoricalPerformances

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
historicalPerformanceDataList	AirInterfaceDiversityHistoricalPerformanceType ./.	0..*	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	

10.6 Data Types

10.6.1 ChannelPlanType

Qualified Name: MicrowaveModel::TypeDefinitions::ChannelPlanType

Table 47: Attributes for ChannelPlanType

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
supportedChannelPlan	String Channel plan name not defined.	1	R	OpenModelAttribute • partOfObjectKey: 1 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Unique name (e.g. ECC/REC/(01)04_Annex 5) of a document, which describes a frequency grid that can be adjusted at the air interface. Corresponding channel plans to be delivered by the hardware vendor and to be stored by the operator in an controller/application attached database.
duplexDistanceIsVariable	Boolean false	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	To be set on 'true', if the distance between transmitted and received frequency is variable.

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
duplexDistance	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: kHz • support: MANDATORY	Distance between transmitted and received frequency.
autoFreqSelectIsAvail	Boolean false	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	In case the microwave radio is capable of automatically selecting the transmit frequency in unlicensed bands, this field shall contain a 'true'.
transmissionModeList	TransmissionModeType ./.	1..*	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	

10.6.2 TransmissionModeType

Qualified Name: MicrowaveModel::TypeDefinitions::TransmissionModeType

Table 48: Attributes for TransmissionModeType

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
transmissionModeId	UniversalId ./.	1	R	OpenModelAttribute • partOfObjectKey: 1 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Indentifies the transmissionMode for internal reference.

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
channelBandwidth	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: kHz • support: MANDATORY	Bandwidth of the transmit channel. The value shall be expressed explicitly (means in kHz) not as a reference to an international agreement. The values shall be chosen from the following _list: 3.500, 7.000, 14.000, 27.500, 28.000, 29.000, 29.650, 30.000, 40.000, 50.000, 55.000, 56.000, 59.300, 60.000, 80.000, 100.000, 112.000, 120.000, 150.000, 200.000, 250.000, 500.000, 750.000, 1.000.000, 1.250.000, 1.500.000, 1.750.000, 2.000.000;
modulationScheme	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_16_BIT • unit: symbols • support: MANDATORY	Modulation scheme, which is base to the other characteristics described in the same transmissionModeType data type. The modulation scheme shall be described by the number of states in the phase diagram (e.g. BPSK->'2' or 256QAM->'256').
codeRate	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_8_BIT • unit: % • support: MANDATORY	Code rate of the coding scheme in % (Net bit rate ≤ Gross bit rate · code rate).
txPowerMin	Integer 99	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_8_BIT • unit: dBm • support: MANDATORY	Value of the minimum transmit power the modem can operate in dBm.
txPowerMax	Integer 99	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_8_BIT • unit: dBm • support: MANDATORY	Value of the maximum transmit power the modem can operate in dBm.

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
rxThreshold	Integer 99	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_16_BIT • unit: dBm • support: MANDATORY	Value of the receive level required to decode the received signal with a Bit Error Rate of 1e-6 or less.
amUpshiftLevel	Integer 99	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_8_BIT • unit: dBm • support: MANDATORY	Value of the receive level that has to be exceeded to shift into a higher modulation scheme.
amDownshiftLevel	Integer 99	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_8_BIT • unit: dBm • support: MANDATORY	Value of the receive level that has to be exceeded for not shifting into a lower modulation scheme.
xpicIsAvail	Boolean false	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	In case this air interface type is capable of XPIC, this field shall contain a 'true'. This information shall purely relate to capabilities of the equipment type, but not to the operational capability of a specific hardware composition on site. Means for example that this attribute might contain a 'true' statement, even if an additional cable would have been required to actually operate XPIC in a specific case.

10.6.3 AirInterfaceProblemSeverityType

Qualified Name: MicrowaveModel::TypeDefinitions::AirInterfaceProblemSeverityType

Table 49: Attributes for AirInterfaceProblemSeverityType

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
problemKindName	String Problem kind name not defined.	1	RW	OpenModelAttribute • partOfObjectKey: 1 • AVC: NA • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Name of the alarm according to AirInterface::AirInterfaceCapability::supportedAlarms
problemKindSeverity	SeverityType WARNING	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Severity of this type of alarm.

10.6.4 AirInterfaceCurrentProblemType

Qualified Name: MicrowaveModel::TypeDefinitions::AirInterfaceCurrentProblemType

Table 50: Attributes for AirInterfaceCurrentProblemType

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
problemName	String Problem name not specified.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Name of the alarm according to AirInterface::AirInterfaceCapability::supportedAlarms

10.6.5 AirInterfacePerformanceType

Qualified Name: MicrowaveModel::TypeDefinitions::AirInterfacePerformanceType

Consolidated performance information of the air interface.

Table 51: Attributes for AirInterfacePerformanceType

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
es	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: s • support: MANDATORY	Number of errored seconds.
ses	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: s • support: MANDATORY	Number of severely errored seconds.
cses	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: s • support: MANDATORY	Number of consecutive severely errored seconds.
unavailability	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: s • support: MANDATORY	Total time of unavailability in seconds.
txLevelMin	Integer 99	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_8_BIT • unit: dBm • support: MANDATORY	Minimum transmit power. Signed integers are required.

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
txLevelMax	Integer 99	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_8_BIT • unit: dBm • support: MANDATORY	Maximum transmit power. Signed integers are required.
txLevelAvg	Integer 99	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_8_BIT • unit: dBm • support: MANDATORY	Averaged transmit power. Signed integers are required.
rxLevelMin	Integer 99	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_8_BIT • unit: dBm • support: MANDATORY	Minimum receive level. Signed integers are required.
rxLevelMax	Integer 99	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_8_BIT • unit: dBm • support: MANDATORY	Maximum receive level. Signed integers are required.
rxLevelAvg	Integer 99	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_8_BIT • unit: dBm • support: MANDATORY	Averaged receive level. Signed integers are required.

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
time2States	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: s • support: MANDATORY	Sum of all seconds the transmitter operated in e.g. BPSK.
time4StatesS	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: s • support: MANDATORY	
time4States	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: s • support: MANDATORY	
time8States	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: s • support: MANDATORY	
time16StatesS	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: s • support: MANDATORY	

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
time16States	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: s • support: MANDATORY	
time32States	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: s • support: MANDATORY	
time64States	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: s • support: MANDATORY	
time128States	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: s • support: MANDATORY	
time256States	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: s • support: MANDATORY	

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
time512States	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: s • support: MANDATORY	
time512StatesL	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: s • support: MANDATORY	
time1024States	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: s • support: MANDATORY	
time1024StatesL	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: s • support: MANDATORY	
time2048States	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: s • support: MANDATORY	

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
time2048StatesL	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: s • support: MANDATORY	
time4096States	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: s • support: MANDATORY	
time4096StatesL	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: s • support: MANDATORY	
time8192States	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: s • support: MANDATORY	
time8192StatesL	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: s • support: MANDATORY	

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
snirMin	Integer -99	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_8_BIT • unit: dB • support: MANDATORY	Minimum signal to (noise+interference) ratio.
snirMax	Integer -99	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_8_BIT • unit: dB • support: MANDATORY	Maximum signal to (noise+interference) ratio.
snirAvg	Integer -99	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_8_BIT • unit: dB • support: MANDATORY	Averaged signal to (noise+interference) ratio.
xpdMin	Integer -99	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_8_BIT • unit: dB • support: MANDATORY	Minimum cross polarization discrimination.
xpdMax	Integer -99	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_8_BIT • unit: dB • support: MANDATORY	Maximum cross polarization discrimination.

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
xpdAvg	Integer -99	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_8_BIT • unit: dB • support: MANDATORY	Averaged cross polarization discrimination.
rfTempMin	Integer -99	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_8_BIT • unit: C • support: MANDATORY	Lowest temperature (in degree Celsius) of the radio module inside the outdoor unit.
rfTempMax	Integer -99	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_8_BIT • unit: C • support: MANDATORY	Highest temperature (in degree Celsius) of the radio module inside the outdoor unit.
rfTempAvg	Integer -99	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_8_BIT • unit: C • support: MANDATORY	Averaged temperature (in degree Celsius) of the radio module inside the outdoor unit.
defectBlocksSum	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_16_BIT • unit: blocks • support: MANDATORY	Total number of blocks that were defect after receiving and could not be corrected by the FEC.

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
timePeriod	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: s • support: MANDATORY	Total length of the measurement period.

10.6.6 AirInterfaceCurrentPerformanceType

Qualified Name: MicrowaveModel::TypeDefinitions::AirInterfaceCurrentPerformanceType

Turns performance information into current performance information by inheriting from OTN_CurrentData.

Table 52: Attributes for AirInterfaceCurrentPerformanceType

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
performanceData	AirInterfacePerformanceType ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	

10.6.7 AirInterfaceHistoricalPerformanceType

Qualified Name: MicrowaveModel::TypeDefinitions::AirInterfaceHistoricalPerformanceType

Turns performance information into historical performance information by inheriting from OTN_HistoryData.

Table 53: Attributes for AirInterfaceHistoricalPerformanceType

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
performanceData	AirInterfacePerformanceType ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	

10.6.8 DiversityType

Qualified Name: MicrowaveModel::TypeDefinitions::DiversityType

Table 54: Attributes for DiversityType

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
diversityName	String Diversity name not defined.	1	R	OpenModelAttribute • partOfObjectKey: 1 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Names to be chosen from the following list: 'spaceDiversity', 'frequencyDiversity'
numberOfAirInterfacesMax	Integer 1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_8_BIT • unit: air interfaces • support: MANDATORY	Maximum number of air interfaces that could be part of this kind of diversity.

10.6.9 AirInterfaceDiversityProblemSeverityType

Qualified Name: MicrowaveModel::TypeDefinitions::AirInterfaceDiversityProblemSeverityType

Table 55: Attributes for AirInterfaceDiversityProblemSeverityType

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
problemKindName	String Problem kind name not defined.	1	RW	OpenModelAttribute • partOfObjectKey: 1 • AVC: NA • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Name of the alarm according to AirInterfaceDiversity::AirInterfaceDiversityCapability::supportedAlarms
problemKindSeverity	SeverityType WARNING	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Severity of this type of alarm.

10.6.10   AirInterfaceDiversityCurrentProblemType

Qualified Name: MicrowaveModel::TypeDefinitions::AirInterfaceDiversityCurrentProblemType

Table 56: Attributes for AirInterfaceDiversityCurrentProblemType

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
problemName	String Problem name not specified.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Name of the alarm according to AirInterfaceDiversity::AirInterfaceDiversityCapability::supportedAlarms

10.6.11   AirInterfaceDiversityPerformanceType

Qualified Name: MicrowaveModel::TypeDefinitions::AirInterfaceDiversityPerformanceType

Consolidated performance information of the air interface diversity group.

Table 57: Attributes for AirInterfaceDiversityPerformanceType

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
snirMin	Integer -99	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_8_BIT • unit: dB • support: MANDATORY	Minimum signal to (noise+interference) ratio of the combined signals.
snirMax	Integer -99	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_8_BIT • unit: dB • support: MANDATORY	Maximum signal to (noise+interference) ratio of the combined signals.
snirAvg	Integer -99	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_8_BIT • unit: dB • support: MANDATORY	Average signal to (noise+interference) ratio of the combined signals.

10.6.12 AirInterfaceDiversityCurrentPerformanceType

Qualified Name: MicrowaveModel::TypeDefinitions::AirInterfaceDiversityCurrentPerformanceType

Turns performance information into current performance information by inheriting from OTN_CurrentData.

Table 58: Attributes for AirInterfaceDiversityCurrentPerformanceType

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
performanceData	AirInterfaceDiversityPerformanceType ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	

10.6.13 AirInterfaceDiversityHistoricalPerformanceType

Qualified Name: MicrowaveModel::TypeDefinitions::AirInterfaceDiversityHistoricalPerformanceType

Turns performance information into historical performance information by inheriting from OTN_HistoryData.

Table 59: Attributes for AirInterfaceDiversityHistoricalPerformanceType

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
performanceData	AirInterfaceDiversityPerformanceType ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	

10.6.14 TdmStructureType

Qualified Name: MicrowaveModel::TypeDefinitions::TdmStructureType

Table 60: Attributes for TdmStructureType

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
tdmStructureName	String TDM structure name not defined.	1	R	OpenModelAttribute • partOfObjectKey: 1 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Names to be chosen from the following list: 'e1','t1','j1','e3','ds3','stm1','cpri1','cpri2','cpri3','cpri4','cpri5','cpri6' or 'cpri7'

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
tdmSegmentSize	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: kbit/s • support: MANDATORY	Size of the TDM segment in kbit/s. Values to be chosen from the following list: '2048','1544','34000','44736','155520','614400','1228800','2457600','3072000','4915200','6144000' or '9830400;
maxNumberOfSegmentsReservable	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_8_BIT • unit: segments • support: MANDATORY	Device specific maximum number of segments (not depending on current air interface configuration) that can be reserved for this type of segment on a single air interface.

10.6.15   StructureProblemSeverityType

Qualified Name: MicrowaveModel::TypeDefinitions::StructureProblemSeverityType

Table 61: Attributes for StructureProblemSeverityType

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
problemKindName	String Problem kind name not defined.	1	RW	OpenModelAttribute • partOfObjectKey: 1 • AVC: NA • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Name of the alarm according to Structure::StructureCapability::supportedAlarms
problemKindSeverity	SeverityType WARNING	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Severity of this type of alarm.

10.6.16 StructureCurrentProblemType

Qualified Name: MicrowaveModel::TypeDefinitions::StructureCurrentProblemType

Table 62: Attributes for StructureCurrentProblemType

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
problemName	String Problem name not specified.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Name of the alarm according to Structure::StructureCapability::supported Alarms

10.6.17 StructurePerformanceType

Qualified Name: MicrowaveModel::TypeDefinitions::StructurePerformanceType

Consolidated performance information of the Structure.

Table 63: Attributes for StructurePerformanceType

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
timePeriod	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: s • support: MANDATORY	Total length of the measurement period in seconds.

10.6.18 StructureCurrentPerformanceType

Qualified Name: MicrowaveModel::TypeDefinitions::StructureCurrentPerformanceType

Turns performance information into current performance information by inheriting from OTN_CurrentData.

Table 64: Attributes for StructureCurrentPerformanceType

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
performanceData	StructurePerformanceType ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	

10.6.19   StructureHistoricalPerformanceType

Qualified Name: MicrowaveModel::TypeDefinitions::StructureHistoricalPerformanceType

Turns performance information into historical performance information by inheriting from OTN_HistoryData.

Table 65: Attributes for StructureHistoricalPerformanceType

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
performanceData	StructurePerformanceType ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	

10.6.20   TdmContainerType

Qualified Name: MicrowaveModel::TypeDefinitions::TdmContainerType

Table 66: Attributes for TdmContainerType

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
tdmContainerName	String TDM container name not defined.	1	R	OpenModelAttribute • partOfObjectKey: 1 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Names to be chosen from the following list: 'e1','t1','j1','e3','t3','stm1','cpri1','cpri2','cpri3','cpri4','cpri5','cpri6' or 'cpri7'
tdmContainerSize	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: kbit/s • support: MANDATORY	Capacity required for transporting this type of container (in kbit/s). Values to be chosen from the following list: '2048','1544','34000','44736','155520','614400','1228800','2457600','3072000','4915200','6144000' or '9830400;

10.6.21   SegmentIDType

Qualified Name: MicrowaveModel::TypeDefinitions::SegmentIDType

Identifies the segments, which are used to transport the container.

Table 67: Attributes for SegmentIDType

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
structureIdRef	UniversalId ./.	1	RW	OpenModelAttribute • partOfObjectKey: 1 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	
segmentIdRef	Integer ./.	1	RW	OpenModelAttribute • partOfObjectKey: 2 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: LENGTH_16_BIT • unit: no unit defined • support: MANDATORY	Combinations of structureId and segmentId must be unique inside the device to assure that every resource is used just once.

10.6.22 SegmentStatusType

Qualified Name: MicrowaveModel::TypeDefinitions::SegmentStatusType

Table 68: Attributes for SegmentStatusType

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
segmentStatusTypeId	Integer ./.	1	R	OpenModelAttribute • partOfObjectKey: 1 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_16_BIT • unit: no unit defined • support: MANDATORY	
segmentIsReservedForTdm	Boolean false	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	The number of segments, which is configured by Structure::StructureConfiguration::tdmReservedNumberOfSegements, has to be reserved for TDM. Starting from the lowest index value, these segments have to be marked with a 'true' in segmentIsReservedForTdm.
operationalStatus	OperationalState DISABLED	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Current operational status of each segment.
obsoletePriorityClass	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: LENGTH_8_BIT • unit: no unit defined • support: MANDATORY Obsolete	PriorityClass as inherited from the associated Container::ContainerConfiguration::priorityClass. In case the device is capable of adapting the sequence, in which segments are being dropped in case of decreasing capacity of the air interface, priorityClass shall be considered, while calculating the dropOrderRank.

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
obsoleteDropOrderRank	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: false • valueRange: no range constraint • bitLength: LENGTH_16_BIT • unit: no unit defined • support: MANDATORY Obsolete	In case the device is NOT capable of adapting the sequence, in which segments are being dropped in case of decreasing capacity of the air interface, dropOrderRank is number of segments minus sequence number of the segment. In case the device is capable of adapting the sequence, dropOrderRank has to be calculated by the device in dependency to the assigned priorityClass. _unique: within Structure::StructureStatus::segmentStatusList

10.6.23   ContainerProblemSeverityType

Qualified Name: MicrowaveModel::TypeDefinitions::ContainerProblemSeverityType

Table 69: Attributes for ContainerProblemSeverityType

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
problemKindName	String Problem kind name not defined.	1	RW	OpenModelAttribute • partOfObjectKey: 1 • AVC: NA • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Name of the alarm according to Container::ContainerCapability::supportedAlarms
problemKindSeverity	SeverityType WARNING	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: YES • isInvariant: false • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Severity of this type of alarm.

10.6.24 ContainerCurrentProblemType

Qualified Name: MicrowaveModel::TypeDefinitions::ContainerCurrentProblemType

Table 70: Attributes for ContainerCurrentProblemType

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
problemName	String Problem name not specified.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Name of the alarm according to Container::ContainerCapability::supportedAlarms

10.6.25 ContainerPerformanceType

Qualified Name: MicrowaveModel::TypeDefinitions::ContainerPerformanceType

Consolidated performance information of the Container.

Table 71: Attributes for ContainerPerformanceType

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
txEthernetBytesMaxS	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: Bytes/s • support: MANDATORY	Counts the number of Bytes of Ethernet traffic (before header compression) transmitted within a second and keeps the highest value within the measurement period. Field to be left blank for all types of TDM containers.
txEthernetBytesMaxM	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_64_BIT • unit: Bytes/min • support: MANDATORY	Counts the number of Bytes of Ethernet traffic (before header compression) transmitted within a minute and keeps the highest value with in the measurement period. Field to be left blank for all types of TDM containers.

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
txEthernetBytesSum	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_64_BIT • unit: Bytes • support: MANDATORY	Total number of Bytes of Ethernet traffic (before header compression) transmitted (in direction out of the device) during the measurement period. Field to be left blank for all types of TDM containers.
timePeriod	Integer -1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: s • support: MANDATORY	Total length of the measurement period in seconds.

10.6.26   ContainerCurrentPerformanceType

Qualified Name: MicrowaveModel::TypeDefinitions::ContainerCurrentPerformanceType

Turns performance information into current performance information by inheriting from OTN_CurrentData.

Table 72: Attributes for ContainerCurrentPerformanceType

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
performanceData	ContainerPerformanceType ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	

10.6.27   ContainerHistoricalPerformanceType

Qualified Name: MicrowaveModel::TypeDefinitions::ContainerHistoricalPerformanceType

Turns performance information into historical performance information by inheriting from OTN_HistoryData.

Table 73: Attributes for ContainerHistoricalPerformanceType

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
performanceData	ContainerPerformanceType ./.	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	

10.7 Enumeration Types

10.7.1 LoopBackType

Qualified Name: MicrowaveModel::TypeDefinitions::LoopBackType

Contains Enumeration Literals:
- NON:
- IF:
  - Intermediate Frequency on the interface between indoor and outdoor unit.
- RF:
  - Radio Frequency on the interface between outdoor unit and outdoor unit at the remote site.

10.7.2 SeverityType

Qualified Name: MicrowaveModel::TypeDefinitions::SeverityType

According to ITU-T M.3160

Contains Enumeration Literals:
- NON_ALARMED:
- WARNING:
- MINOR:
- MAJOR:
- CRITICAL:

10.7.3 PolarizationType

Qualified Name: MicrowaveModel::TypeDefinitions::PolarizationType

Contains Enumeration Literals:
- NOT_SPECIFIED:
- HORIZONTAL:
- VERTICAL:

10.7.4 ProtectionType

Qualified Name: MicrowaveModel::TypeDefinitions::ProtectionType

Contains Enumeration Literals:
- HSB:

10.7.5 RoleType

Qualified Name: MicrowaveModel::TypeDefinitions::RoleType

Contains Enumeration Literals:
- WORKING:
- PROTECTION:
- PROTECTED:

10.7.6 AirInterfaceDiversityStatusType

Qualified Name: MicrowaveModel::TypeDefinitions::AirInterfaceDiversityStatusType

Contains Enumeration Literals:
- GROUP_DOWN:
  - All air interfaces that are members of the diversity configuration are down.
- NOT_ALL_AI_ACTIVE:
  - At least one, but not all of the air interfaces that are part of the diversity configuration is not working.
- ALL_AI_ACTIVE:

o   All air interfaces that are part of the diversity configuration are working.

10.8 Super Classes

10.8.1 MwCurrentProblem

Qualified Name: MicrowaveModel::ObjectClasses::SuperClasses::MwCurrentProblem

Applied stereotypes:
- OpenModelClass
  - objectCreationNotification: NO
 - objectDeletionNotification: NO
  - support: MANDATORY

Table 74: Attributes for MwCurrentProblem

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
sequenceNumber	Integer ./.	1	R	OpenModelAttribute • partOfObjectKey: 1 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: no unit defined • support: MANDATORY	Unique sequence number of the current problem object.
timeStamp	DateAndTime 20101120140000.0Z+1	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Time and date of the problem. _format:yyyyMMddhhmmss.s[Z|{+|-}HHMm]; yyyy='0000'..'9999' year; MM='01'..'12' month; dd='01'..'31' day; hh='00'..'23' hour; mm='00'..'59' minute; ss='00'..'59' second; s='.0'..'.9'tenth of second (set to '.0' if EMS or NE cannot support this granularity); Z='Z' indicates UTC (rather than local time); {+|-}='+' or '-' delta from UTC; HH='00'..'23' time zone difference in hours; Mm='00'..'59' time zone difference in minutes.

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
problemSeverity	SeverityType WARNING	1	R	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Severity of the alarm.

10.9 Notifications
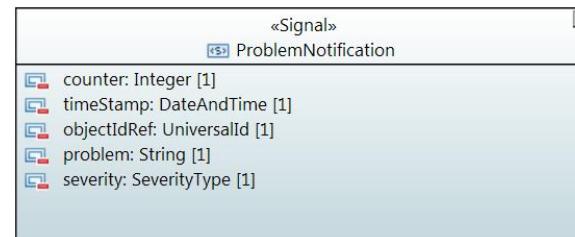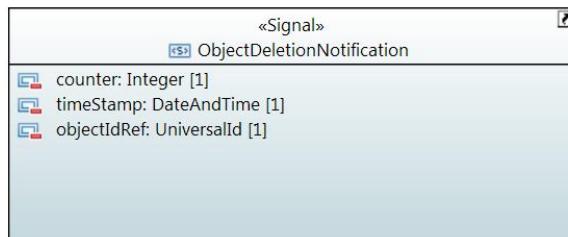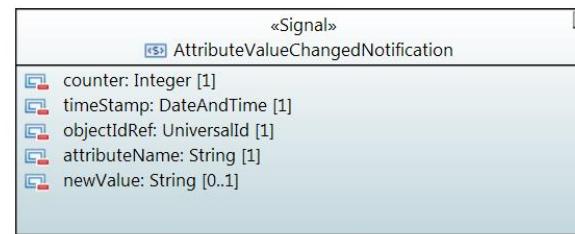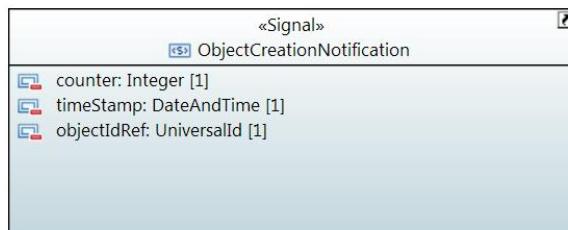
10.9.1 AttributeValueChangedNotification

Qualified Name: MicrowaveModel::Notifications::AttributeValueChangedNotification

To be sent when an attribute has changed and one or more controllers have to update their data.

Applied stereotypes:
- OpenModelNotification
  - triggerConditionList: invalid
  - support: MANDATORY

Table 75: Attributes for AttributeValueChangedNotification

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
counter	Integer -1	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: no unit defined • support: MANDATORY	Counts attribute value changed notifications.
timeStamp	DateAndTime 20101120140000.0Z+1	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	
objectIdRef	UniversalId ./.	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	ID of the affected MW_AirInterface_Pac, MW_AirInterfaceDiversity_Pac, MW_Structure_Pac, MW_PureEthernetStructure_Pac, MW_HybridMwStructure_Pac, MW_Container_Pac, MW_EthernetContainer_Pac or MW_TdmContainer_Pac.
attributeName	String Attribute name not specified.	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Name of the attribute that has been changed.
newValue	String New value not specified.	0..1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Attribute value converted to a string (xml, json, ...)

10.9.2 ObjectCreationNotification

Qualified Name: MicrowaveModel::Notifications::ObjectCreationNotification

To be sent when a new MW_AirInterface_Pac, MW_AirInterfaceDiversity_Pac, MW_Structure_Pac, MW_PureEthernetStructure_Pac, MW_HybridMwStructure_Pac, MW_Container_Pac, MW_EthernetContainer_Pac or MW_TdmContainer_Pac has to be instancieted in the controller.

Applied stereotypes:
- OpenModelNotification
  - triggerConditionList: invalid
  - support: MANDATORY

Table 76: Attributes for ObjectCreationNotification

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
counter	Integer -1	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: no unit defined • support: MANDATORY	Counts object creation notifications.
timeStamp	DateAndTime 20101120140000.0Z+1	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	
objectIdRef	UniversalId ./.	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	ID of the affected MW_AirInterface_Pac, MW_AirInterfaceDiversity_Pac, MW_Structure_Pac, MW_PureEthernetStructure_Pac, MW_HybridMwStructure_Pac, MW_Container_Pac, MW_EthernetContainer_Pac or MW_TdmContainer_Pac.

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
objectType	String Type of created object not specified.	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Type of Object to be chosen from the following list of values: 'MW_AirInterface_Pac', 'MW_AirInterfaceDiversity_Pac', 'MW_Structure_Pac', 'MW_PureEthernetStructure_Pac', 'MW_HybridMwStructure_Pac', 'MW_Container_Pac', 'MW_EthernetContainer_Pac' or 'MW_TdmContainer_Pac'.

10.9.3 ObjectDeletionNotification

Qualified Name: MicrowaveModel::Notifications::ObjectDeletionNotification

To be sent when a new MW_AirInterface_Pac, MW_AirInterfaceDiversity_Pac, MW_Structure_Pac, MW_PureEthernetStructure_Pac, MW_HybridMwStructure_Pac, MW_Container_Pac, MW_EthernetContainer_Pac or MW_TdmContainer_Pac instance has to be deleted in the controller.

Applied stereotypes:
- OpenModelNotification
  - triggerConditionList: invalid
  - support: MANDATORY

Table 77: Attributes for ObjectDeletionNotification

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
counter	Integer -1	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: no unit defined • support: MANDATORY	Counts object deletion notifications.

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
timeStamp	DateAndTime 20101120140000.0Z+1	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	
objectIdRef	UniversalId ./.	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	ID of the affected MW_AirInterface_Pac, MW_AirInterfaceDiversity_Pac, MW_Structure_Pac, MW_PureEthernetStructure_Pac, MW_HybridMwStructure_Pac, MW_Container_Pac, MW_EthernetContainer_Pac or MW_TdmContainer_Pac.

10.9.4 ProblemNotification

Qualified Name: MicrowaveModel::Notifications::ProblemNotification

To be sent when a problem occurs at a MW_AirInterface_Pac, MW_AirInterfaceDiversity_Pac, MW_Structure_Pac, MW_PureEthernetStructure_Pac, MW_HybridMwStructure_Pac, MW_Container_Pac, MW_EthernetContainer_Pac or MW_TdmContainer_Pac.

Applied stereotypes:
- OpenModelNotification
  - triggerConditionList: invalid
  - support: MANDATORY

Table 78: Attributes for ProblemNotification

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
counter	Integer -1	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: LENGTH_32_BIT • unit: no unit defined • support: MANDATORY	Counts problem notifications

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
timeStamp	DateAndTime 20101120140000.0Z+1	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	
objectIdRef	UniversalId ./.	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	ID of the affected MW_AirInterface_Pac, MW_AirInterfaceDiversity_Pac, MW_Structure_Pac, MW_PureEthernetStructure_Pac, MW_HybridMwStructure_Pac, MW_Container_Pac, MW_EthernetContainer_Pac or MW_TdmContainer_Pac.
problem	String Problem name not specified.	1	RW	OpenModelAttribute • partOfObjectKey: 0 • AVC: NO • isInvariant: true • valueRange: no range constraint • bitLength: NA • unit: no unit defined • support: MANDATORY	Name of the problem according to AirInterface::AirInterfaceCapability::supportedAlarms or AirInterfaceDiversity::AirInterfaceDiversityCapability::supportedAlarms or Structure::StructureCapability::supportedAlarms or PureEthernetStructure::PureEthernetStructureCapability::supportedAlarms or HybridMwStructure::HybridMwStructureCapability::supportedAlarms or Container::ContainerCapability::supportedAlarms or EthernetContainer::EthernetContainerCapability::supportedAlarms or TdmContainer::TdmContainerCapability::supportedAlarms.

Attribute Name	Type DefaultValue	Multiplicity	Access	Stereotypes	Description
severity	SeverityType

WARNING | 1 | RW | OpenModelAttribute
- partOfObjectKey: 0
- AVC: NO
- isInvariant: true
- valueRange: no range constraint
- bitLength: NA
- unit: no unit defined
- support: MANDATORY | Severity of the problem according to AirInterface::AirInterfaceConfiguration::problemSeverityList, AirInterfaceDiversity::AirInterfaceDiversityConfiguration::problemSeverityList, Structure::StructureConfiguration::problemSeverityList, PureEthernetStructure::PureEthernetStructureConfiguration::problemSeverityList, HybridMwStructure::HybridMwStructureConfiguration::problemSeverityList, Container::ContainerConfiguration::problemSeverityList, EthernetContainer::EthernetContainerConfiguration::problemSeverityList or TdmContainer::TdmContainerConfiguration::problemSeverityList |

11 Translation Table Functional Model

Functional Model	Information Model
MW-Client	Container
MWS	Structures
MWS-X	Group of Structures
MWPS	AirInterface

12 References

Reference	Comment
[ONF CM]	TR-512 ONF Core Information Model Version 1.2, September 2016 (https://www.opennetworking.org/images/stories/downloads/sdn-resources/technical-reports/TR-512_CIM_(CoreModel)_1.2.zip)
[ONF SDN Arch WL]	SDN Architecture for Wireless Transport Networks 1.0, July 2016 (https://www.opennetworking.org/images/stories/downloads/sdnresources/technical-reports/TR_SDN_ARCH_WL_1.0.pdf)
[ONF UMLG]	TR-514 UML Modeling Guidelines; Version 1.2, September 2016 (https://www.opennetworking.org/images/stories/downloads/sdn-resources/technical-reports/TR-514_UML_Modeling_Guidelines_v1.2.pdf and https://www.opennetworking.org/images/stories/downloads/sdn-resources/technical-reports/IISOMI_514_UML_Modeling_Guidelines_v1.2.pdf)
[RFC 7950]	YANG - A Data Modeling Language for the Network Configuration; Version 1.1, August 2016 (https://tools.ietf.org/html/rfc7950)

13 Back matter

13.1 Editors

Thorsten Heinze

Telefonica Germany GmbH & Co. OHG

Martin Skorupski

highstreet technologies GmbH consulting Telefonica Germany GmbH & Co. OHG

13.2 Contributors

Many thanks to Ariel Adam, Jonas Ahlberg, Ippei Akiyoshi, Dudu Bercovich, Michael Binder, Giorgio Cazzaniga, George Clapp, Luis Miguel Contreras, Nigel Davis, Chris Hartley, Ahsen Javed, Petr Jurcik, Thomas Kessler, Linda Ming, Danilo Pala, James Ries, Giuseppe Roveda, Paolo Spallaccini, Alexandru Stancu, Tracy Van Brakle, Maarten Vissers, Min Ye, Yang Yonggang, Bernd Zeuner and Nader Zein for reviewing and commenting of the Microwave Information Model.

_____